



SensusREAD

by Sensus Metering Systems

© 2008 Sensus Metering Systems

SensusREAD

© 2008 Sensus Metering Systems

All rights reserved. No parts of this work may be reproduced in any form or by any means - graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems - without the written permission of the publisher.

Products that are referred to in this document may be either trademarks and/or registered trademarks of the respective owners. The publisher and the author make no claim to these trademarks.

While every precaution has been taken in the preparation of this document, the publisher and the author assume no responsibility for errors or omissions, or for damages resulting from the use of information contained in this document or from the use of programs and source code that may accompany it. In no event shall the publisher and the author be liable for any loss of profit or any other commercial damage caused or alleged to have been caused directly or indirectly by this document.

Printed: December 2015

Table of Contents

Part I Introduction	6
Part II Installation	7
1 Software License.....	9
2 Handheld Preparation.....	10
3 Installation on the PC.....	16
4 Installation on Handheld.....	16
5 Solving Installation Problems.....	16
Part III Changes from version 3.5	21
1 File Button.....	22
2 Ribbons.....	23
Part IV AMR Channels	25
1 Sensus((S))cout Channel.....	26
Scout Hardware	28
Scout Address	28
Scout Repeaters	29
Reading Points	29
2 MBus (IEC 870) Channel.....	30
MBus Addresses	30
3 Flag (IEC 1107) Channel.....	31
4 RAMAR Channel.....	31
RAMAR hardware	32
5 Sensus Interface Channel.....	32
Sensus Interface Hardware	33
6 Sensus-RF Channel.....	33
Sensus-RF Hardware	41
Sensus-RF Address	41
Sensus-RF Repeaters	42
Sensus-RF Quick Guide	42
Part V Quick Start Guide	45
1 Setting Up Your Hardware.....	46
2 Route Planning.....	47
3 Route Plan to Route.....	48
4 Route Reading.....	49
5 Importing Data.....	49
6 Exporting Data.....	50
7 Physical Units.....	51
8 Language.....	52

Part VI PC Software User Guide 53

1	Folder List.....	54
	SensusREAD Home	54
	Route Plannning	55
	Routes	55
	(All) Sequence.....	55
	(All) Sites	55
	Import Sets	55
	Export Sets	56
	SensusREAD Net Files	56
2	Dialogs.....	57
	Choose Your AMR Channels	57
3	Using Data Grids.....	58
	Data Searching	60
	Data Sorting	60
	Data Grouping	61
	Data Filtering	61
	Quick Column Customization	63

Part VII HH Software User Guide 65

1	Main Window.....	67
2	Readout Status.....	72
3	Routes.....	72
4	Route Planning.....	76
5	Manual.....	79
6	MBus.....	80
7	Sensus((S))cout.....	82
8	Flag	87
9	Sensus.....	88
10	Ramar.....	89
11	Sensus-RF.....	91
12	Logon and access levels.....	95
13	COM Port Numbers.....	95
14	Suspend Mode.....	96
15	Keyboard Shortcuts.....	96

Part VIII Program Info 99

1	Localization.....	100
2	TXT Import File Structure.....	101
3	PC database.....	102
	Code Book Channels	102
	Code Book Devices	103
	Code Book Periods	105
	Code Book Units	105
	Code Book Counters	106
4	NET Files.....	107
5	HH Database	108
	Directory structure	108

Data Files Format	113
-------------------------	-----

Index	117
--------------	------------

1 Introduction

Description of the SensusREAD Program

Last update of document: 12/15/2015

This meter reading system is adaptable to walk-by, mobile or targeted fixed network, methods of collecting data. The transition from walk-by to mobile to fixed network is seamless and allow both methods to operate in parallel.

The reading equipment is capable of receiving meter readings while utilizing a handheld reading device. The system has the capability to read the radio frequency technology for improving meter reading efficiency including addressing "hard-to-read" meters and increasing meter reader safety. The system is still able to allow manual entry within the same route without detaching the probe or radio interface unit.

PC Software

The Windows application installed on the PC. Its main function is to make route assignments and to send updated information to the handhelds. The PC software transfers files between utility and the data collection devices. It can also transfer collected readings to the billing system via a transfer file.

Handheld Software (HH Software)

The Windows CE (Windows Mobile) application installed on the handheld. The means of communication between the meter reader and the PC software, is a handheld unit capable of reading various meters. It is able to store and communicate meter readings to the PC software for further use and analysis.

The handheld data collection software has the capability to collect and store meter readings at any time of the meter reading route, by any of the following methods:

1. Manual use through the use of an alphanumeric keypad
2. Via connected devices, e.g. optical probe, inductive probe, MBus terminals, Harry device.
3. Via radio transmission

The unit is able to obtain all types of readings on any particular route without requiring reprogramming of the the handheld computer, physical change of software contained within the unit while in the field.

Emulator Software (EM Software)

The Windows application installed and running on the PC emulating the handheld software.

Contact and Support Information

Sensus

Sensus Metering Systems GmbH Hannover

Meineckestrasse 10

D-30880 Laatzen

Deutschland

Germany


Tel: +49 (0) 5102-74-0

Fax: +49 (0) 5102-74-3339

<http://www.sensus.com>

E-mail: info.de@sensus.com

Part

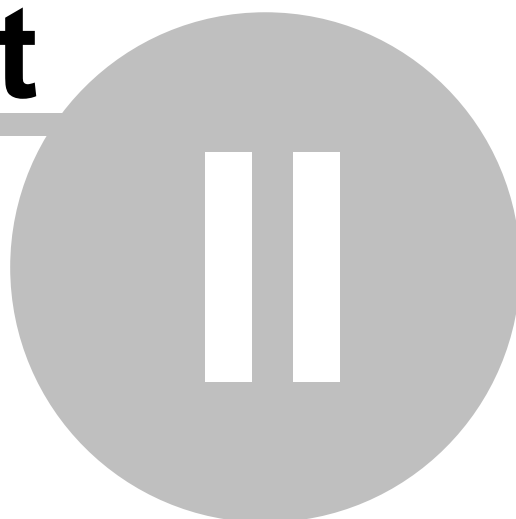

2 Installation

The installation of the SensusREAD



Warning - Never connect the handheld (Psion Workabout Pro) to your PC before you are asked to do so by the installation program. The installation program first has to install the drivers for the handheld computer.

The installation is divided into 3 basic steps.

Step 1. Installation of the handheld

This step is required mainly for working with handhelds, and it doesn't depend on whether you use the SensusREAD program or not. This part of the installation is described in this manual and also in your handheld's documentation. Read the manufacturer's instructions carefully before installing and connecting the handheld. If you are using more than one handheld of the same type, do this step only for the first one. Various problems may occur, especially when connecting the handheld to the PC. In this case, follow the instructions given in the manufacturer's manual.

Step 2. Installation of the SensusREAD on the PC

The installation of the SensusREAD on the PC is fully automated and controlled by the setup program. This step is simple and no problems should occur.

Step 3. Installation of the SensusREAD on the handheld

After the installation of the SensusREAD software on your PC you can install the SensusREAD on one or more handhelds. The installation is fully controlled by the SensusREAD and no problems should occur.



Warning - The installation steps must be done in order. Violation of this order can result in complications, which you won't be able to eliminate without expert assistance.

Minimum System Requirements

PC requirements:

Administrative privileges on the system (only during the installation).

The following Windows platforms are supported:

Microsoft Windows 7
Microsoft Windows Vista
Microsoft Windows XP

The latest service packs and security updates are recommended for all platforms.

Older systems are not supported (Windows 98, Windows ME, Windows 95).

Microsoft Internet Explorer 6.0 SP1 or later

Prerequisites: The product requires Microsoft .NET Framework 2.0 SP1 or higher. If you do not have the Microsoft .NET Framework on your system, then the Microsoft .NET Framework 2.0 will be installed with the product.

Free space requirement: Approximately 100 MB of disk space is required for full product installation, and the installer requires 20 MB additional temporary space

Intel Pentium or compatible, 1.4GHz minimum (2GHz+ recommended)

1GB RAM (2 GB recommended)

800x600 or higher resolution monitor

Mouse or other pointing device

Color quality above 256 colors (32-bit or 16-bit is sufficient)

Microsoft ActiveSync software version 4 or later for connecting the handheld(s)

Handheld requirements:

- Psion Workabout Pro model G1, G2 or later with Windows CE operating system (**Windows Mobile is not currently supported**).
- Additional extension card(s) for probe and radio reading, please consult your handheld supplier about details.

2.1 Software License

Unregistered Version

Unregistered version can only be used for 60 days. After expiring the unregistered version period, you have to uninstall the software or register it. Unregistered version is fully functional, please see also Licensed Features table below.

Registration

Every time you start unregistered version of the software, About dialog is shown and you can register the software using the page Licenses. At any time or if you want to change your existing license, please display the About dialog using the File Button | About command and select the page License.



The license is linked to the unique PC hardware ID, please run the registration process exactly on the PC where you want to use the software. If you need license for more computers, repeat the following procedure on every PC:

- Install the unregistered version
- Request the license file
- Load the license file

To request a license file, click on the button "Send License Request" button. Fill in your registration request data and send the request through email on the suggested email address.

License Owner : It is recommended to use your company name. If you plan to purchase more licenses please use always the same license owner.

Serial Number : Please fill in the SensusREAD product serial number delivered from Sensus. The number has format A00AA000000A and can be found on the installation CD cover. Leave empty if you don't have this number.

PC Hardware ID : Generated by the software, it is a unique PC identification number.



The maximum meter count limits the total number of the meters. Please remember that if you are using more databases the total number of the meters is the sum of the meters in all databases. If you exceed the licensed maximum count, the software shows error message

Max meter count exceeded! The main functions are blocked (upload, download, export,...), please delete some meter sites or request for license update.

After receiving the license file please start the software again and click the button "Load License file".

Licensed Features

	Unregistered	Registered Maximum Meter Count	Registered Maximum Meter Count
Max Meter Count The maximum count of the meter sites in all databases.	Unlimited	10, 60, 250, 1000 10 or 60 or 250 or 1000	Unlimited Unlimited
PC - HHD Data Upload/Download This feature is required to use the handheld software (reading meters on the handheld including all channels). Data exchange between HH and PC through direct USB connection.	YES	YES *	YES *
PC - HHD Net Files Data Exchange Data exchange between HH and PC through email. Requires internet connection on the HH, e.g. GPRS modem.	YES	YES *	YES *
PC - Serial Channels (Manual, MBus, Flag, RAMAR, Sensus) This feature is required to use the emulator software (reading meters on the PC).	YES	YES *	YES *

PC - Scout Waveport Channel This feature is required to use the emulator software (reading meters on the PC).	YES	YES *	YES *
Plug-in kVASy Export/Import	YES	YES *	YES *
Plug-in Sigi Export/Import	YES	YES *	YES *
Plug-in Temetra Export/Import More plug-in can be added in the future...	YES	YES *	YES *
PC Software - changing the database location This is required to change the default database location from the default folder (all users documents) to any user defined folder.	NO	NO	YES

* - Available if the feature is included in your license file

2.2 Handheld Preparation

Supported handhelds

The SensusREAD software supports the following type of handhelds: Psion Workabout Pro (the successor of the Workabout MX which is not supported).

How to connect the Workabout PRO with the PC ?

Software: Windows Vista users require Windows Mobile Device Center (link), Windows 2000/XP users require Active Sync (link).

Running Active Sync with Windows XP, please check you have admin rights, firewall settings, active DHCP-client, active Netbios over TCP/IP.

Most connection problems with Windows 2000/XP are gone if you install USB drivers: USB Setup application (PTX P/N: 1000997).

Hardware:

G0/G1 units: you need docking station WA4002 (C) or WA4102 (S) or WA4003 (C+S) or quad-docker WA4204-G2 (C+S).

G2 units: you need dockingstation WA4003 (C+S) or quad-docker WA4204-G2 (C+S). There is also adapter WA4001-G2, which will be plugged in the Tether port of the Workabout PRO unit and connect it to any PC/Laptop "active sync". Acts as a slim communication option to the desk docker.


Workabout Pro Preparation

Psion Workabout Pro uses the Windows operating systems, as do many other handhelds. The program ActiveSync controls the communication between your PC and your handhelds (e.g. Psion Pro) using the Windows operating system. This program has to be installed on the PC. It is distributed free of charge by Microsoft. Its installation program can be found in the Psion Pro package, or it can be downloaded from the Microsoft website, www.microsoft.com. When you go to this website, search for the keyword "ActiveSync".


You first need to have ActiveSync in order to install Psion Pro. Since it can be used by other PDAs and MDAs, check first to see if ActiveSync hasn't already been installed.

If you are not sure if you have ActiveSync, check the list of currently installed programs. Another easy way to check if ActiveSync is running on your PC is to observe the icons in the Windows Taskbar:

Windows XP : Active Sync connected Active Sync NOT connected

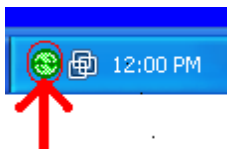

Windows Vista : Double click Sync Center icon

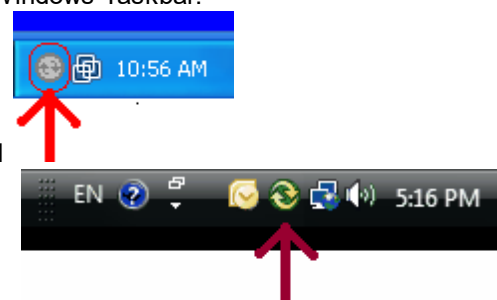

to

display the handheld status

If the program ActiveSync has already been installed, check that its version is 4 or newer. If it is not, then upgrade the ActiveSync software. If the ActiveSync software has been installed and its version is 4 or higher, skip the next paragraph and go to the section "Linking a Workabout Pro to a PC".

Installation Instructions for Microsoft ActiveSync

1. Locate the ActiveSync setup software on your PC or download it from the Microsoft website.



ActiveSync language.

ActiveSync is available in many languages. Choose the one you want when downloading the setup software.

2. Select "Run" to run this program from its current location, and click OK.
3. Follow the instructions on the screen.



Check the ActiveSync installation.

After the successful installation (including the restart of your PC), the dialog "Get Connected" appears. Click "Cancel" and continue with the installation of the USB drivers for Psion Pro. **If the ActiveSync installation doesn't run successfully, abort the entire installation of Workabout Pro and contact Microsoft.**

Linking a Workabout Pro to a PC

The desktop docking station can be connected to a PC using USB cable so that you can exchange files between Workabout and the PC in the same way that you would between PC drives. A USB cable to the PC is included with your docking station.

Installation of USB drivers for Psion Pro

The USB Setup application (PN 1000997) is used to update a Windows PC so that it can connect to a Psion Teklogix Workabout Pro.

This installation program is delivered with your Workabout. It is called "usbsetup-wapro.exe" or similar. Please contact your Workabout distributor if you cannot find this installation program in your delivery package.

The driver that controls USB communication is wceusbsh (for communication through ActiveSync with a device running Windows CE .NET). This driver must be updated with Workabout Pro specific information so that the Workabout Pro can be recognized by your PC.

The installation program:

- updates a copy of the device installation script wceusbsh.inf with Psion Teklogix specific information,
- sets up a USB connection between the PC and the Workabout Pro,
- installs the Workabout Pro as a device on your PC. This may require notifying the PC OS that the device should be reinstalled and then reconnecting the USB device.

Launching The Application

Start the installation program "usbsetup-wapro.exe". The log file is initiated and the program introduction is written in it.




USB setup software language.

USB setup software is available only in English.

Pre-Installation: Updating wceusbsh.inf


1. Welcome Dialog Box:

You can click on the "Back" and "Next" buttons to navigate between the pre-installation windows. At any time during the pre-installation process, you can click on "Cancel" to exit the program.

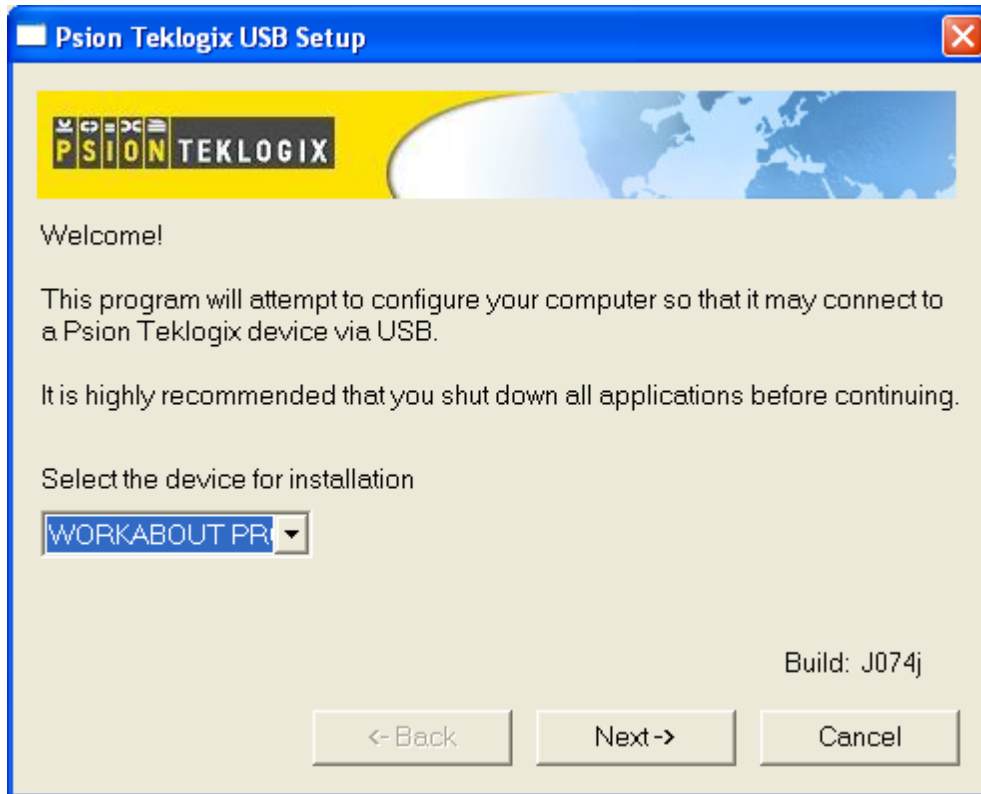

- Shut down all other software programs – especially ActiveSync – to avoid a restart request during installation.
 - Select the device for installation. In this case, Workabout Pro.
 - Click on "Next".

The program checks that ActiveSync is installed and that it is a supported version (i.e. 4 or later). If the version installed on your PC is not supported, you'll need to exit the USB Setup application and install a later version of ActiveSync.
2. Device Driver INF File Selection Dialog Box:
- This dialog box allows you to choose the paths of the appropriate inf files. Default file paths are provided in this dialog box.
- If necessary, click on the "Browse" to select different paths for the inf files.

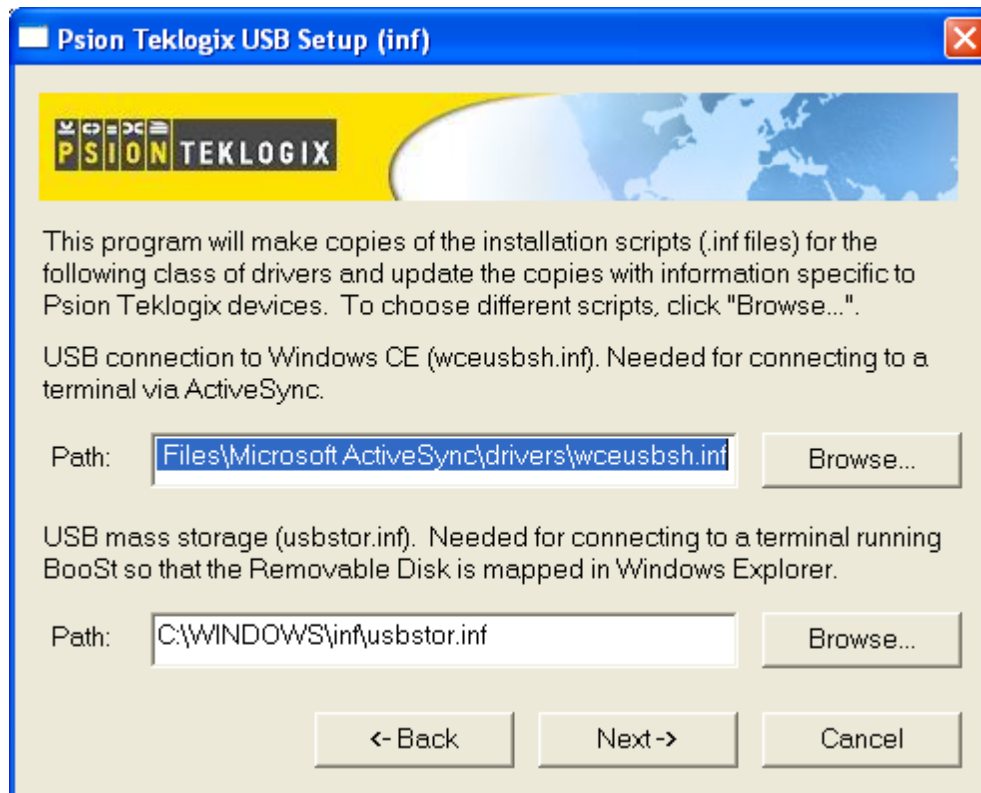

3. Device Driver Installation Selection Dialog Box. Select only the driver USB connection to Windows CE (wceusbsh).

You can choose to have the device drivers installed immediately by selecting the check box (✓), or you can leave the check box blank and Windows will install the Workabout Pro the next time it is connected. It is recommended that the device be installed immediately.




- Click on "Next".

**Note:**

None of the drivers are updated by default. To complete the process, you must establish USB connections.

4. Device Driver Backup Selection Dialog Box:

The USB Setup application will attempt to back up the driver .sys files before attempting the installation. It specifies which files it will try to back up and the location where it will back them up.

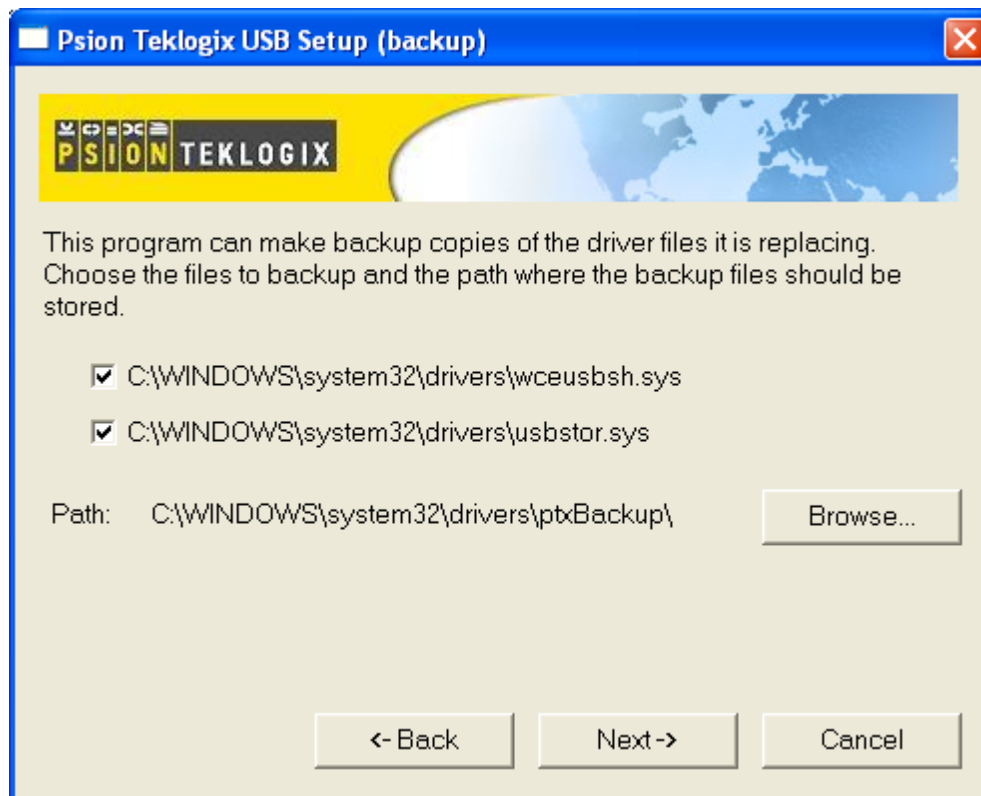**Note:**

Both drivers are selected for backup by default. The backup directory is <system directory>\drivers\ptxBakup.

If the dialog with the warning "Installation of software which is untested for verify its compatibility with Windows XP" ("unsigned" software) appears, continue the installation with the button "Continue Anyway".

Installation: Workabout Pro As A Device On Your PC

1. Installation Dialog Box:

The .sys files you selected are copied to the backup directory. If an unknown error occurs during the backup, you are asked whether you'd prefer to cancel the installation or continue with the process. The wceusbsh.inf file is updated.

2. Indicate that the wceusbsh driver should be installed. The installation dialog box appears again.

The USB Setup application will attempt to install the driver immediately. This will succeed only if a valid USB connection to the device that is **running Windows CE .NET** exists.

**Note:**

When you see the above dialog, then it's the right moment to connect your Workabout Pro to your PC. Follow the steps in the dialog.

- If the installation fails due to an unknown error, the installation for this particular driver is aborted.
- If the installation fails because there was an inappropriate USB connection, there are two possibilities:
 - An appropriate USB connection was never established between the PC and the Workabout Pro running Windows CE .NET. In this case, when an appropriate USB connection with this device exists, Windows will automatically attempt to install the device driver.
 - An appropriate USB connection existed between the PC and the Workabout Pro running Windows CE .NET, but it has since been severed. Windows may or may not attempt to automatically install the device drivers when there is an appropriate USB connection.

**Path to the ActiveSync file:**

If requested by Windows, set the **wceusbsh.sys** location of the default directory with the Microsoft ActiveSync file from the setup as C:\Program Files\Microsoft ActiveSync\Drivers\wceusbsh.sys .

- A window is displayed where you can click on "Cancel" to abort the wceusbsh driver installation or continue. It also contains instructions to boot your device into Windows CE .NET mode and establish a USB connection between the device and the PC. When you create the appropriate connection, Windows automatically installs the device drivers. The 'Found New Hardware' wizard may appear. Your only interaction with this window is to click on "Finish".
- If this is the first appropriate connection between the device and the PC – i.e., there was no previous devnode for the device in the system – the "Continue" button is activated as soon as the connection is made. Where there was a devnode present in the system and it has been marked for reinstallation, the "Continue" button will not become active until Windows has completed the driver installation and the device is no longer marked for reinstallation. Only one devnode per device can be 'unset' when the device drivers are finally installed.

Post Installation

1. Done Dialog Box:

This dialog box indicates the success or failure of the installation.

- To view the log file, click on "Log File".
- To exit the program, click on "Exit".

2.3 Installation on the PC

Please do not start the installation of the SensusREAD before the preparation of the handheld computer (Workabout Pro) is fully completed. The handheld should be connected to your PC before you start installation of the SensusREAD. You can skip preparation of your handheld computer if you plan to do it later. You can also skip preparing your handheld if you will not connect handheld directly to your PC and plan to exchange the route data and readings with your readers remotely (e.g. via email).

To install the SensusREAD on your PC, do the following:

1. Run the downloaded installation file, which you can get from SENSUS METERING SYSTEMS.
2. Follow the instructions on the screen.

2.4 Installation on Handheld

SensusREAD Installation on Workabout Pro

1. Select "Run" to run this program from its current location, and click OK.
2. Check the connection with the handheld (the ActiveSync icon in the Windows Taskbar should be green).
3. Click on the button "Install".
4. Wait until the newly opened window with the running installation operations disappears and the SensusREAD icon appears on the handheld screen. With Enter you can start the program on the Workabout Pro.

2.5 Solving Installation Problems


Psion Pro is plugged in to the PC, but there is no connection

Symptoms


After plugging Psion Pro in to the PC, nothing happens. There is no connection between the devices. ActiveSync may activate, but it detects no device.

Recommended procedure

1. Check if ActiveSync is running. The easiest way to do this is by observing the icons in the Windows Taskbar: Windows XP

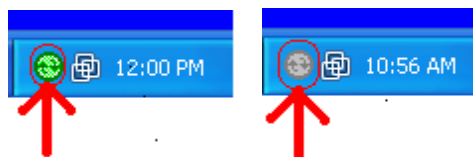


2. If ActiveSync isn't running, run it with the command from the Windows main menu: Start | All Programs | Microsoft ActiveSync.
3. Check the connection settings of ActiveSync. View the main window of ActiveSync:

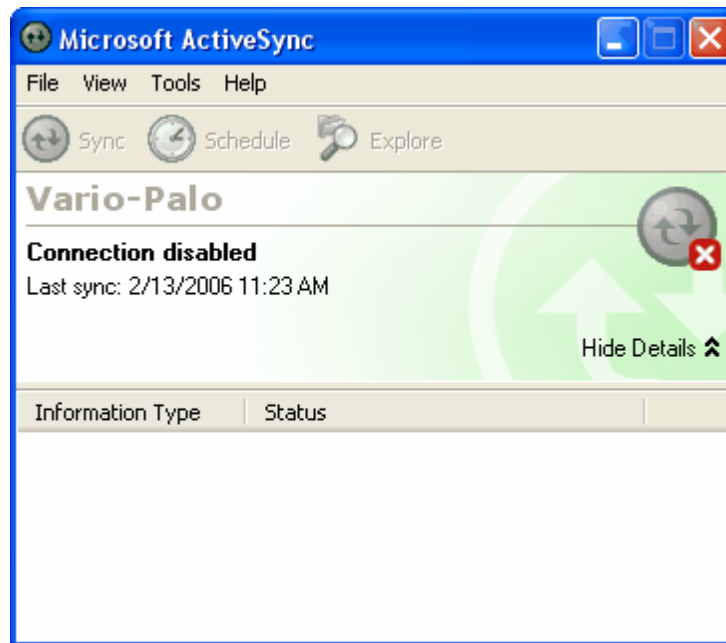

4. Select the command File | Connection Settings.



5. Select the checkbox "Show status icon in taskbar", and "Allow USB connections".
Don't select the checkbox "Allow connections to one of the following".
Then select the checkbox "Open ActiveSync when my device connects".
Click on "OK" to confirm.

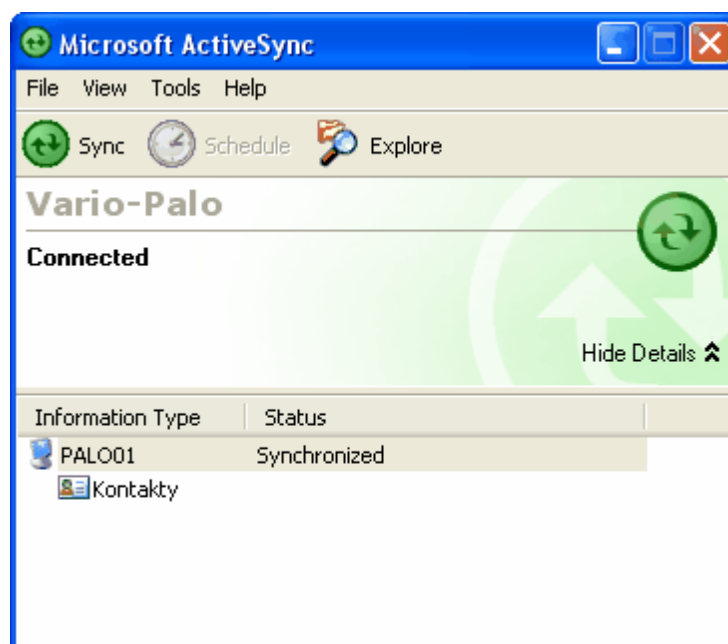

6. Unplug Psion Pro.
7. Plug Psion Pro back in to the PC.

Psion Pro drivers missing

Symptoms


Psion Pro has been detected by ActiveSync, but the drivers weren't found and Psion Pro behaves like an unknown device. These problems might occur if the step "Installation of USB drivers for Psion Pro" was not finished successfully.

Recommended procedure

1. Disconnect Psion Pro from the PC.
2. Repeat the "Installation of USB drivers for Psion Pro".


If installation problems persist, we recommend repeating the whole installation from the very beginning:

1. Disconnect Psion Pro from the PC.
2. Remove the program Microsoft ActiveSync 4.0.

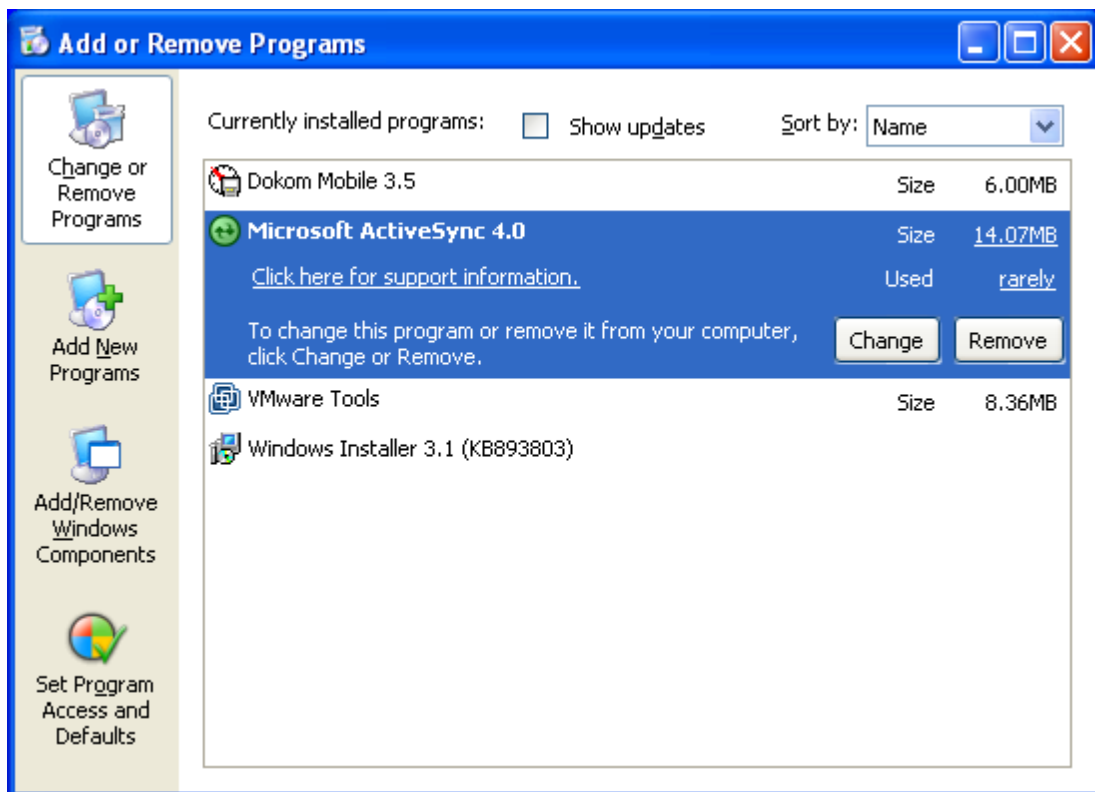

3. Remove the program SensusREAD (if already installed).
4. Start the installation with Step 1. Handheld installHandheld Installation.

Part

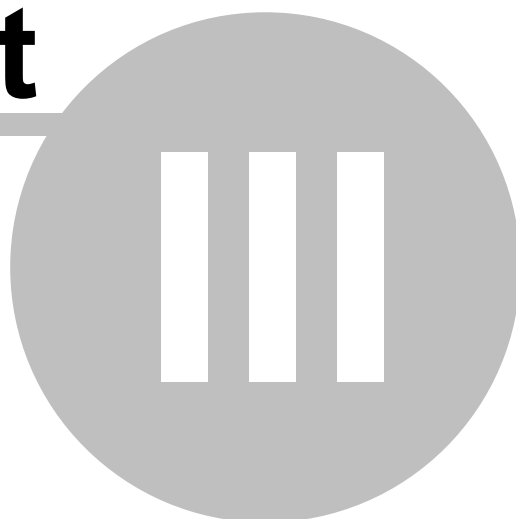

3 Changes from version 3.5

Supported Handhelds

Only Workabout Pro and later models are supported. Workabout MX is no longer supported.

All the handheld communication devices and channels supported in the previous version of the software are supported.

What happened to the File menu?

The user interface has been significantly redesigned. The File menu has been replaced with the File Button .

For more information about the File Button, see What and where is the File Button?.

For more information about the new location of the Options button, see What happened to the Options command on the Tools menu?.

The popup menus and toolbars have been replaced with ribbon bar user interface.

Important : No option is currently available to switch the user interface back to the File menu, toolbars, and commands as they appeared in earlier versions of this program.

Where are the Route and Off-route buttons?

The off-route table is on the Route Planning page.


The route table is now available on the Routes Page.


How to install the software to my handheld?

Features for installing and updating the handheld software were moved to the ribbon bar at the top of the window, together with all “upload” and “download” actions.


3.1 File Button

Where is the File Button located?

The **File Button**  is located in the upper-left corner of the main window.

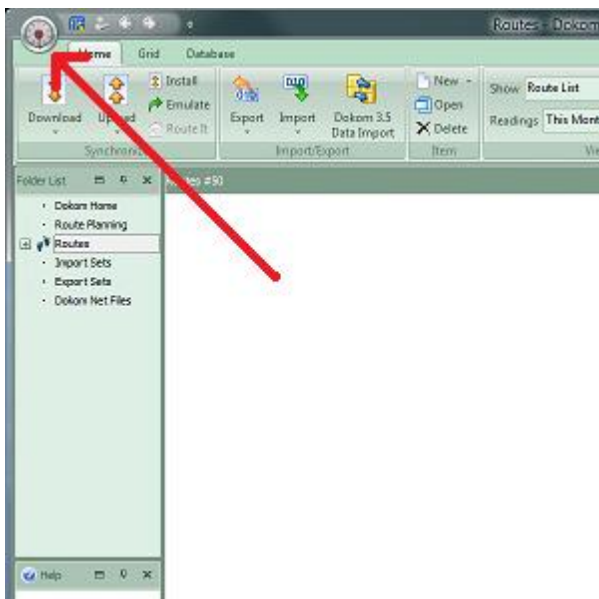



What do I see when I click the File Button?

When you click the **File Button** , you see the same basic commands available on the File menu in earlier

releases of the software to open, print and export your data.


Where is the Options command?

After you click the **File Button** , you can also see the new location where you can set your preferences. The Options command that was on the Tools menu has been moved to be under the **File Button** . The new location for the **Options** command is in the lower-right corner under **Program Options**.

3.2 Ribbons

Ribbons

Ribbons are the modern way to help users find, understand, and use commands efficiently and directly—with a minimum number of clicks, with less need to resort to trial-and-error, and without having to refer to Help. A ribbon is a command bar that organizes a program's features into a series of tabs at the top of a window. Using a ribbon increases discoverability of features and functions, enables quicker learning of the program as a whole, and makes users feel more in control of their experience with the program. A ribbon can replace both the traditional menu bar and toolbars.

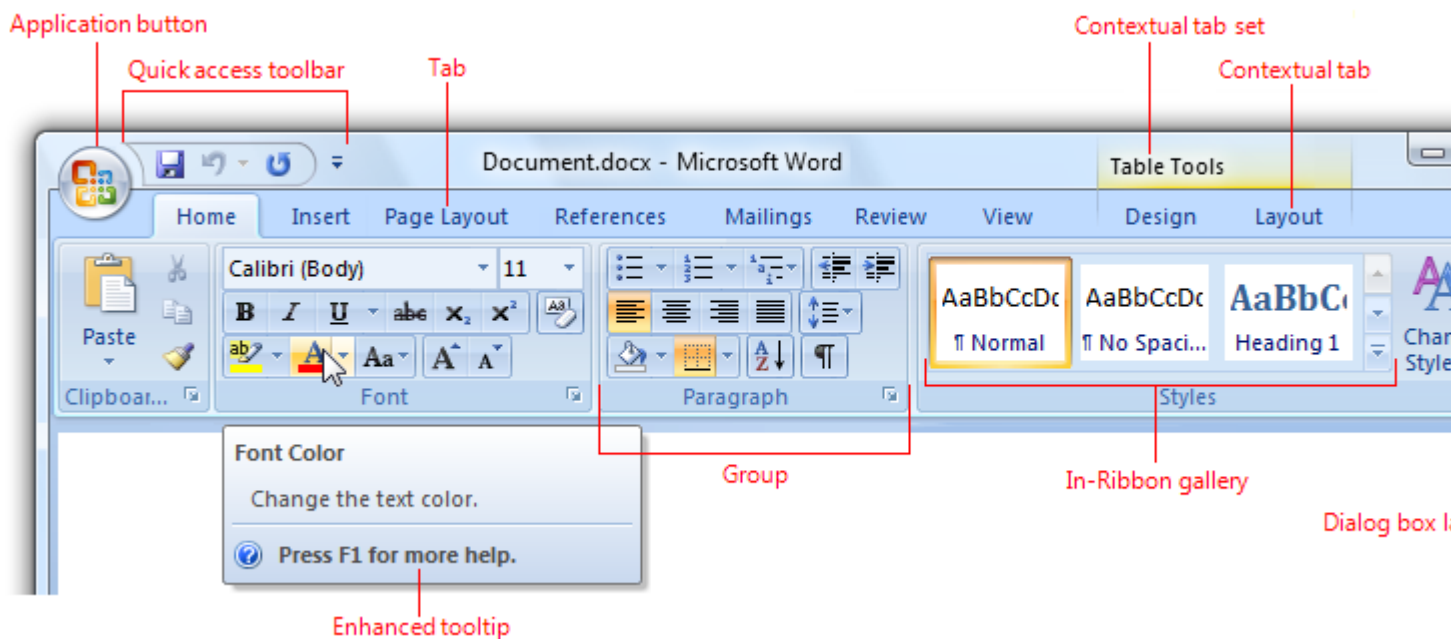

A typical ribbon.

Enhanced ToolTips

ToolTip is a graphical user interface (GUI) feature in which a small text box appears when a mouse pointer is hovered over an icon or button. The pop-up window will provide details that explain the icon's or button's function. In some instances, though, the ScreenTip will display only the item's name. When the mouse is moved away from the icon or button, the ScreenTip will disappear from view.

A ToolTip window can contain three sections – header, description and footer. Each section can display an explanatory image, descriptive text and keyboard shortcut.

Part

IV

4 AMR Channels

Communication Channel Manual or 'Manual'

Manual readings are always available.

Communication Channel MBus (IEC 870) or 'MBus'

M-Bus (Meter-Bus) possible usages: Reading MBus meters on a wired bus via MBus master, or reading meters via inductive or optical probes.

This channel requires a handheld with a serial COM port (RS-232 or TTL interfaces).

See also channel specific chapter for the MBus Channel.

Communication Channel Sensus((S))cout or 'Scout'

This is a wireless network for walk-by or drive-by meter reading using Scout modules such as Scout-P, Scout-S or Scout-Mei.

This channel requires a handheld with the WaveCard radio.

See also channel specific chapter for the Sensus((S))cout Channel.

Communication Channel Flag (IEC 1107) or 'Flag'

FLAG (IEC 61107, formerly called IEC 1107) possible usage: Reading utility meters via optical probes.

This channel requires a handheld with a serial COM port (RS-232 or TTL interfaces) or USB port.

See also channel specific chapter for the ZVEI (FLAG) Channel.

Communication Channel Sensus Interface or 'Sensus'

Sensus interface possible usage: Reading Sensus meters using the SmartGun device.

This channel requires a handheld with the SmartGun device required.

See also channel specific chapter for the Sensus Channel.

Communication Channel RAMAR

This is a wireless network for walk-by or drive-by meter reading using Ramar radio modules such as the Ramar impulse transponder or MiniBus transponder.

This channel requires a handheld with the HandTrack device.

See also channel specific chapter for the RAMAR Channel.

Communication Channel Sensus-RF

This is a wireless network for walk-by or drive-by meter reading using Sensus-RF radio modules such as the iPERL.

This channel requires a handheld with the SIRT device.

See also channel specific chapter for the Sensus-RF Channel.

4.1 Sensus((S))cout Channel


Sensus((S))scout wireless AMR system

Sensus((S))cout is a 868 MHz bidirectional radio system flexible in topology and application. It was specially developed for meter reading. Available options include the collection of readings via the GSM-Network. This AMR system also provides a comprehensive solution for mixed applications. It allows consumption meters to be read by radio using different methods. This AMR system allows the operators to read all their meters as often as they wish and to collect the needed information.

The newest technology and innovative energy management provides stand alone battery operation time of typically 10 years with weekly reading. Also in difficult environmental situations like pit installations the electronics is protected by its sealed IP68 housing. Sensus((S))cout modules demonstrate a long radio range, because the radio power used is 25mW. Interference free data transfer is achieved by the using the European regulated radio band 868 MHz.

More information can be found on www.sensus.com.


Configuring the Handheld for the Sensus((S))scout Channel

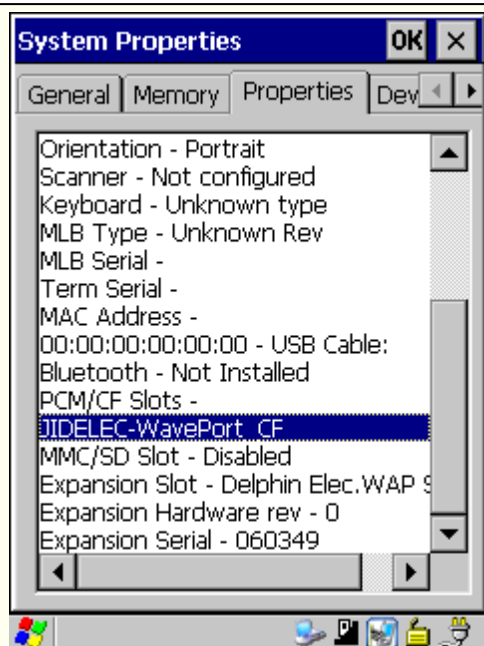

Check that the radio card is properly installed in your handheld computer. Please go to Start | Settings | Control Panel | System | Properties.

If you are using the internal radio card, it must be listed in the hardware module list under the name `_WavePort_`.

If you are using the Bluetooth radio card, please ensure that the card and the handheld were properly paired - see instruction in your Bluetooth device manual.

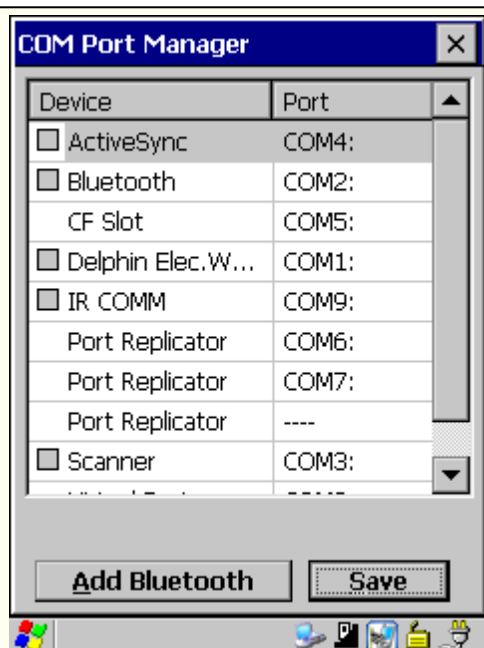

Check the COM ports assignment on your handheld. Please go to Start | Settings | Control Panel | COM Port Manager. The radio card must be assigned to a valid COM Port number, **in case of the internal CF radio card it is recommended to use the COM5.**

Please ensure that there are no conflicts in the COM port assignment.

Test the radio card connection on your handheld.



For testing the radio card connection or modifying the connection options, you have to have at least the security level of Installer. Check and if necessary modify connection options both for Route Planning and Routes.

Route Planning - start the route planning window with Scout channel selected and go Tools | Connection Options. Click on the Test button. Wait for the window with the test result, when OK - an info window will appear with address and firmware of the radio card. On error a message will be displayed - then try another COM port.

Routes - go Tools | Connection Options | Scout and use the same settings.

4.1.1 Scout Hardware



Waveport

Wavenis network access modems for PCs and handheld computers. Ideal for remote monitoring, fixed networks and data collection. USB, RS-232 and Compact Flash versions available.



Waveflow (Scout-S, Scout-P, Scout-P2, Scout-MB,...)

Intelligent wireless transceiver and data logger for today's most demanding smart gas, water and electric metering applications. Includes customizable metering profile firmware.

4.1.2 Scout Address

Scout radio address formats

Scout radio addresses can be written in 2 different formats, the decimal format, e.g. 00328-06-03145731 or hexadecimal format, e.g. 0148 06 300003.

The SensusREAD can accept both formats, it means type the address of the module to the software exactly as you see it on the module box, no matter which format is used on the module.

Converting radio address format using the PC software

Click Home | New | Meter Site.

Select page AMR Configuration and select the channel Sensus((S))cout .

Fill in the radio address in the field Address

The decimal and hexadecimal format of the address is visible right from your entry

Address	026560903157769	02656-09-03157769	0A6009302F09
---------	-----------------	-------------------	--------------

The decomposition of the hexadecimal radio address:

AA BB CC DE EE EE

AA = This value can contain the identifier of the production location or a customer number

BB = Product code

CC = Production year

D = Physical RF communication (0x30 for 868Mhz products)

EEEE = Serial number

Product Code

0x15 = Wavetalk V1 (repeater)

0x16 = Waveflow V1 (e.g. Scout-S V1)

0x1B = Waveport

0x39 = Wavelook


0x48 = Scout-MB
 0x60 = Waveflow V2 (e.g. Scout-V2)
 0x61 = Wavetalk V2
 ...More codes can be defined in future.

4.1.3 Scout Repeaters

When you cannot reach a meter (a final device) directly from the handheld radio, you can use repeaters, which enable you to redirect the signal to the final device. Repeaters work as a relay station for the received radio transponder modules and forward the data over longer distances to the handheld. You can use any meter as a repeater or a device configured as repeater. You can use up to 3 repeaters between handheld radio and the final device.

What is meant by **first**, **second**, and **third** repeater? Is this in order from the final equipment or from the reading equipment?

The **first repeater** is the **nearest** repeater to the reading equipment.

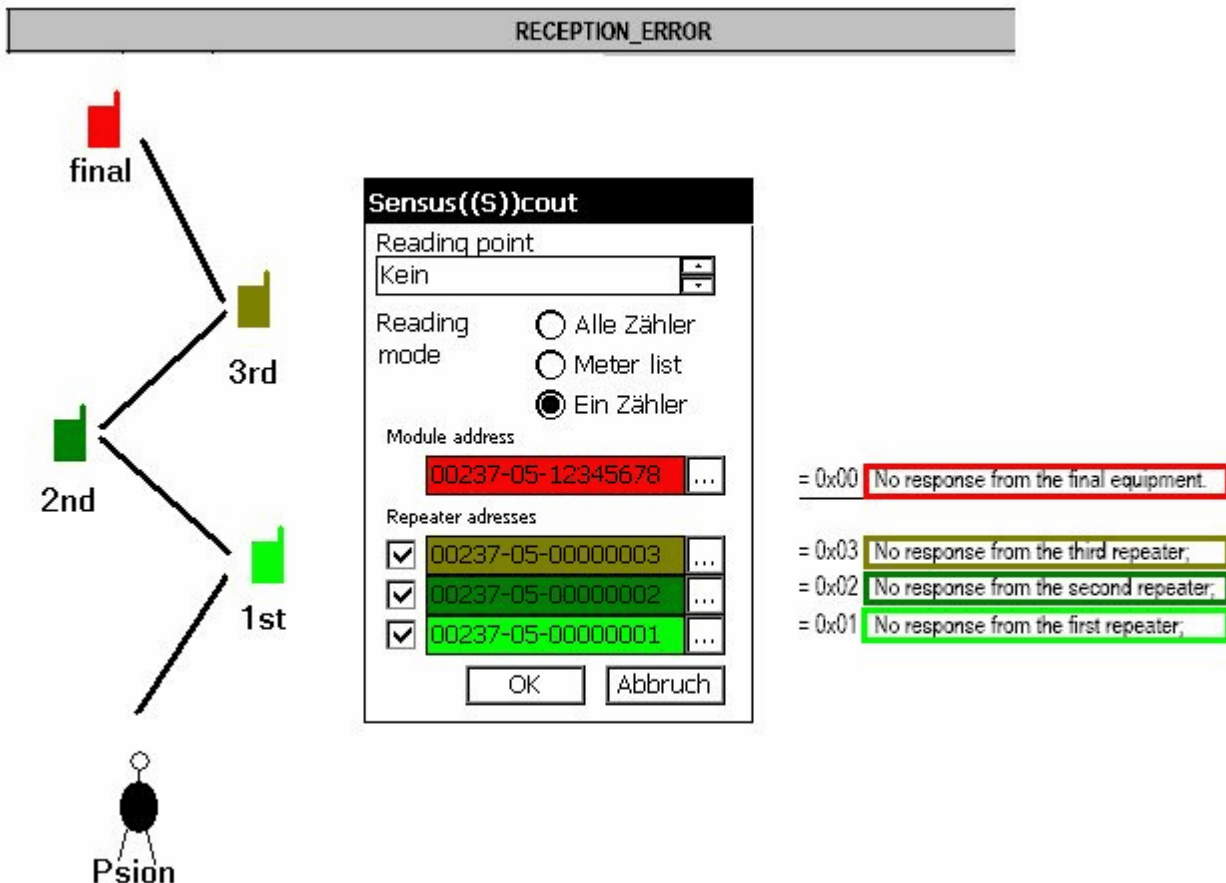

4.1.4 Reading Points

The user can enter a reading point for every meter.

The reading point and its order can be taken either directly from "Route Planning", or it can be added or changed in SensusREAD on the PC before the route is transferred from the PC.

The reading point is used by route readouts with the "SENSUS((S))cout" communication channel. When you read according to the reading point, the application will start with the reading point of the selected meter or, if no meter

has been selected, then that of the meter in the first row. It will progress according to the reading point order. For example, when starting with a reading point with point order 3, the readout will, after completing 3, continue on to point order 4 then back to point order 1 and will end with point order 2.



You have to read ALL meters in a reading point before you can progress to the next reading point.

4.2 MBus (IEC 870) Channel

M-Bus ("Meter-Bus")

The M-Bus ("Meter-Bus") is a new European standard for remote reading of heat meters and it is also usable for all other types of consumption meters as well as for various sensors and actuators.

The remote reading of heat meters can take place in different ways, beginning with the classical method - manual reading by the personnel of the providers - up to the remotely controlled collection of all the meter values for a complete housing unit. The latter is a logical continuation/extension of the technical development of consumption meters and is realizable with the help of the M-Bus.

Here some substantial characteristics of this interface are mentioned regarding their new possibilities:

- The data (e.g. heat consumption) are read out electronically.
- At one single cable, which connects to a building controller all consumption meters of a housing unit can be attached.
- All meters are individually addressable.
- Apart from the availability of the data at the controller also a remote reading is possible.

A set of advantages arise, both for the supply enterprises, and for their customers:

- The reading is fast and avoids reading errors.
- The data being present in machine-readable form makes the further processing easier.
- A remote readout saves personnel expenditure, avoids unnecessary penetration into the private sphere of the inhabitants and permits to mount meters in places which are difficult to access.
- Short reading intervals are possible, which reduces the problems with tenant change or tariff amendments.
- Due to the short reading intervals statistical data can be obtained, which can be used as a base for network optimization.

The standardization of the m-bus results in further technical possibilities. In particular devices of different manufacturers can be operated on the same bus; the users are free therefore in the choice of the manufacturer.

The economic and technical aspects of the m-bus interface are relevant for everyday use:

- Large number of connectable devices
- Possibility for network expansion
- Fail-safe characteristics / robustness
- Minimum cost
- Minimum power consumption in the meters
- Acceptable transmission speed

More information can be found on www.sensus.com.

4.2.1 MBus Addresses



Primary MBus address:

The primary MBus address (1-250) must be unique among the meters connected to one MBus line (to one serial COM port). Therefore, such an address can be used just once within the MBus line. Having more than one meter in the system with the same primary address generates a collision, so the address cannot be used, neither for parameter setting nor meter readout.

For primary addresses you can use values fitting within one byte, from 0 to 255, with the following limitations:

The address 0 should only be used for new meters which haven't yet been configured.

The addresses 251 and 252 can't be used, because they are reserved for the MBus standard.

The address 253 can't be used, because it is used during communication via secondary MBus addresses.

The address 254 can't be used, because it is reserved for communication with all meters at once (broadcast address with reply). When you use 254 all meters receive the communication and reply to it.

The address 255 can't be used, because it reserved for communication with all meters at once (broadcast address without reply). When you use 255 all meters receive the communication but they do not reply to it.

**Allowed primary addresses:**

Meters can be programmed with addresses from 0 to 250, but we recommend not using 0.

If the MBus address has been set successfully, it will appear in the Meters window in the Address column (when using the primary address). If the meter has already been read, in the Results window the address will be changed. These changes enable further communication with the meter with its new address. To thoroughly check implementation of the change, we recommend running a meter readout.

4.3 Flag (IEC 1107) Channel

FLAG protocol

FLAG (a subset of the international standard IEC1107) protocol defines the lowest level interface to a piece of electronic equipment. It used asynchronous "RS-232", half-duplex, and the device nominates the baud rate. Many types of physical connection are possible. These include RS-232, and RS-434 signal levels, current loop, open collector. A modem-friendly version exists for PSTN, GSM, and proprietary packet data services (eg Vodaphone Data "Paknet"). A multi-drop addressing system is used allowing a number of FLAG devices to exist on one communications bus.

The following exchange usually takes a second or two, and occurs when a person from the utility company presses a meter-reading gun against a transparent faceplate on the meter, or plugs into the metering bus at the mailbox of an apartment building.

The general protocol consists of a "sign on" sequence, in which a handheld unit identifies itself to the metering unit. During sign-on, the handheld unit addresses a particular meter by number. The meter and hand-held unit negotiate the fastest communication rate that they can both manage. Next, the meter challenges the hand held unit with a cryptographic password. The hand held unit must return an encrypted password. If the password exchange is ok, the meter accepts the hand held unit- it is "signed on."

After signing on, the hand held unit generally reads some registers that describe the current count of metered units (i.e. kilowatt hours, megajoules, litres of gas or water) and the metering unit's reliability (is it still operating ok?). Most metering units have special modes for calibration and resetting meter registers. These modes are usually protected by anti-tampering features such as switches that sense if the meter enclosure has been opened. The hand held unit then sends a sign-off message, and the meter automatically signs off a minute after the last message, if no sign-off message is sent.

More information can be found on www.sensus.com.

4.4 RAMAR Channel

RAMAR AMR System

RAMAR's radio frequency (RF) devices work with existing utility equipment to provide a distinct cost-effective means of migrating from manual to automated data collection. The RF receiver that permits meter readers to quickly retrieve a large number of meter readings from a vehicle. It collects data

from the meter interface unit (MIU) that transmits the meter reading and account information. It is designed to enable the meter reader to collect meter reading data while driving in a vehicle at normal speeds. Information is collected and stored in a vehicle mounted laptop computer, which is then downloaded at the end of the day to a billing system. The system operates in the 902 MHz to 928 MHz ISM band and is FCC Part 15 compliant, which means that no part of the system requires a license for operation.

RAMAR products are designed to work in an open systems environment. RAMAR products use standard interfaces

and protocols to ensure maximum compatibility. Minimum packet information includes customer code, TransPondIT ID, tamper count, meter reading, and cyclic redundancy check (CRC).

More information can be found on www.sensus.com.

4.4.1 RAMAR hardware



HandTrackIT is designed to work via a serial link with a hand-held computer or PC. It is designed to collect data from electric, gas and water meters using the 433.92 MHz radio band.

The HandTrackIT is a portable radio device. It can be carried, or worn on a belt, or on a shoulder strap (see photograph below). In normal operation the HandTrackIT is attached to a hand held computer via a serial cable supplied by RAMAR.

4.5 Sensus Interface Channel

Sensus Interface

This versatile meter reading system reads inside meters sets and meters in underground pits or vaults. Proven at hundreds of utilities since 1984, this meter reading system eliminates meter reading problems and errors while speeding the on-site reading process. In less than two seconds, each meter reading is electronically transferred through a reading gun or probe. The reading data is later off-loaded to a PC at the utility office where it can be used to generate management reports or for printing customer bills.

More information can be found on www.sensus.com.

4.5.1 Sensus Interface Hardware



Model 3092 TouchGun is a multifunction, versatile meter reading device. It is designed as a visual reading interrogation device or can be connected to a HandHeld Device or a number of other electronic meter reading collection and data storage devices for reading Sensus and other meter register encoders.

Construction: The TouchGun is ergonomically designed. It is housed in a weather resistant molded case, with an industrial feel. Surface mounted circuitry in the specially designed watertight case allows the AutoGun to be used in rugged field conditions over a wide range of temperatures.



SmartGun (3000 series) models are supported.

AutoGun (4000 series) models are not supported but it is planned to implement it.



MultiRead Equipment can be used for connecting multiple meters equipped for reading with TouchRead AMR system installations. One MultiRead module can replace up to seven individual AMR data transmission devices to save the cost of duplicate interface devices. Available in 4-port and 8-port models.

4.6 Sensus-RF Channel


Sensus-RF wireless AMR system

Sensus-RF is low power 868MHz or 433MHz integrated radio technology. Using a 1½ way communication system, it offers both the benefits of one and two way system architecture. The innovative design provides billing and alarm status for walk-by/drive-by data collection.

More information can be found on www.sensus.com.


Configuring the Handheld for the Sensus-RF Channel

Windows Mobile 6

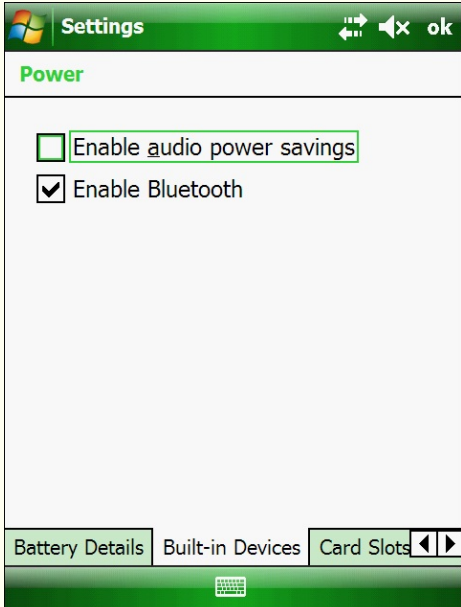


The screenshot shows the 'Settings' application with the 'Power' tab selected. Under the 'Power' section, there are two checkboxes: 'Enable audio power savings' which is unchecked, and 'Enable Bluetooth' which is checked. At the bottom of the screen, there are tabs for 'Battery Details', 'Built-in Devices', and 'Card Slots'.

Switch the SIRT on.
On the HH go to Start | Settings | System | Power | Built-in Devices
Ensure that Bluetooth is enabled

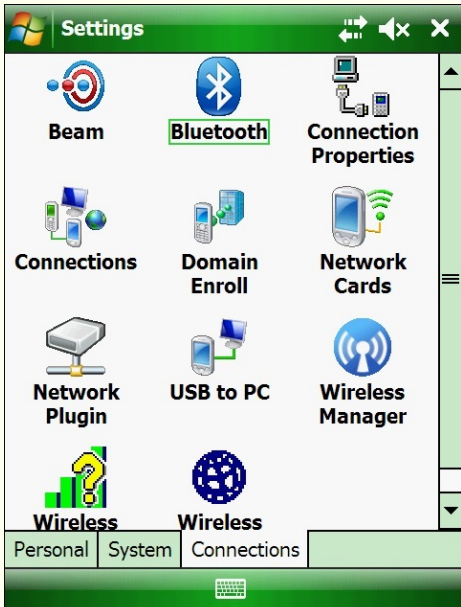

The screenshot shows the 'Settings' application with the 'Connections' tab selected. It displays a grid of icons for various connection settings: Beam, Bluetooth (highlighted with a green box), Connection Properties, Connections, Domain Enroll, Network Cards, Network Plugin, USB to PC, and Wireless Manager. At the bottom, there are tabs for 'Personal', 'System', and 'Connections'.

Go to Start | Settings | Connections | Bluetooth

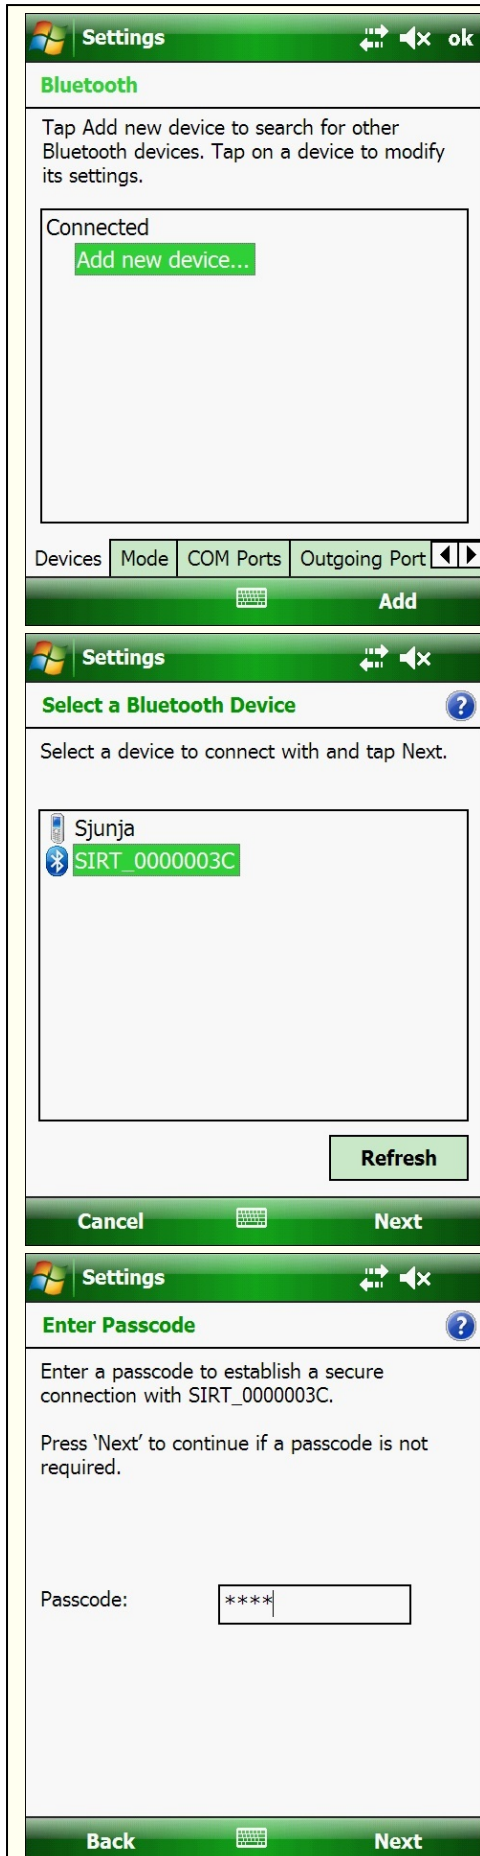

Click on "Add new device..."

In the list of available devices select the SIRT and click "Next"

Enter SIRTs passcode and click "Next"




Select "COM Ports" tab and click "New Outgoing Port"

In the list of available devices select the SIRT and click "Next"


Select free COM port and click "Finish"

Windows CE

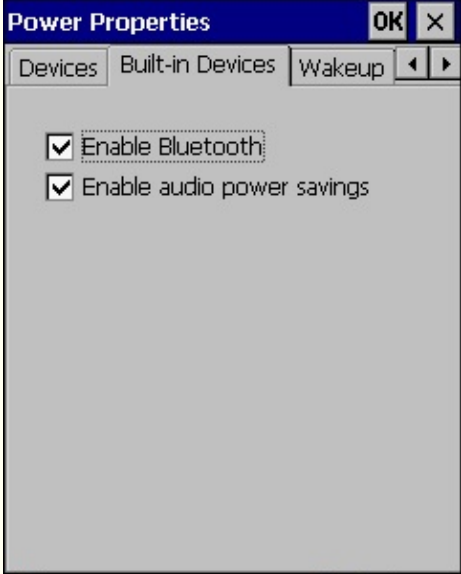



The screenshot shows the 'Power Properties' dialog box in Windows CE. The 'Built-in Devices' tab is selected. Under the 'Wakeup' section, there are two checked options: 'Enable Bluetooth' and 'Enable audio power savings'. The dialog has 'OK' and 'X' buttons in the top right corner.


Switch the SIRT on.
On the HH go to Start | Settings | Control Panel | Power | Built-in Devices
Ensure that Bluetooth is enabled



The screenshot shows the 'Settings' application in Windows CE. The 'File' menu is open, and the 'Bluetooth' option is highlighted. Other visible options include 'App Launch Keys', 'Certificates', 'COM Port Manager', 'Date/Time', 'Dialing', 'Display', 'Dr. Debug', 'Error Reporting', 'Input Panel', 'Internet Options', and 'IPv6 Support'.


Go to Start | Settings | Control Panel | Bluetooth

  

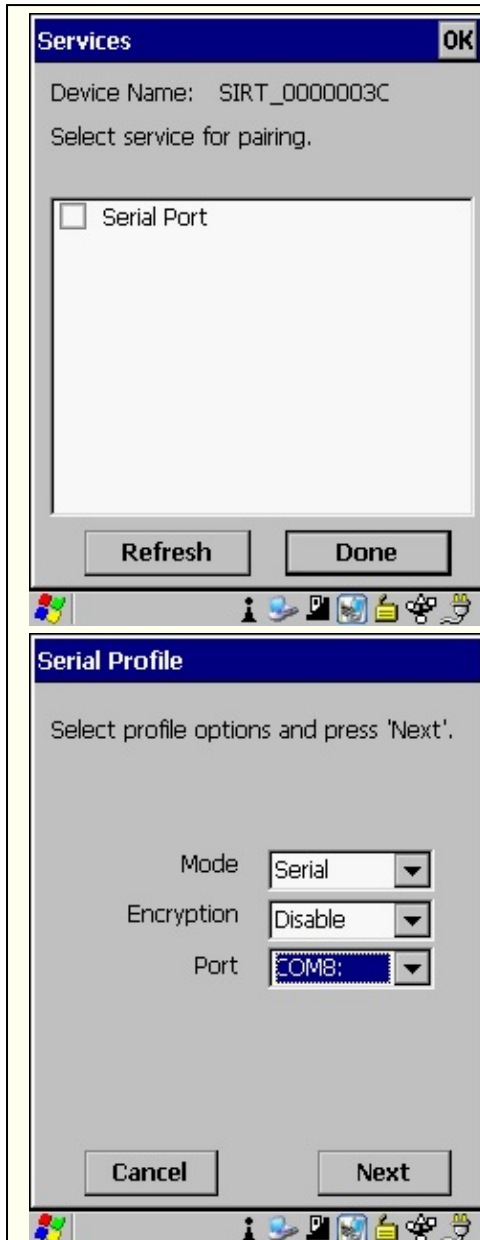

Check "Serial Port"

Select appropriate COM port, click "Next" and on "Services" page click "Done"

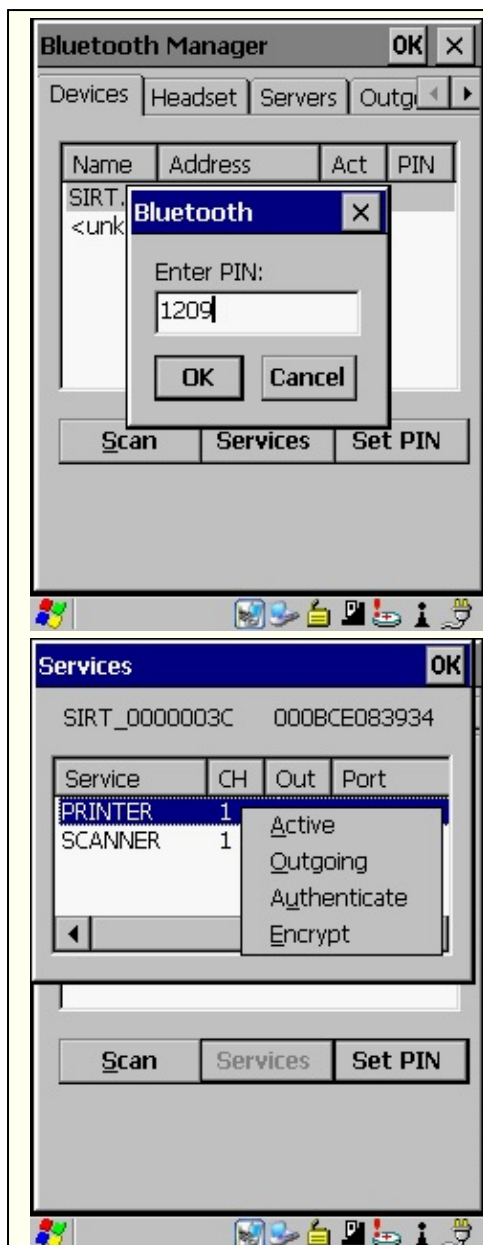

On the older version of Psion HH, after Bluetooth devices scan, click "Set PIN" and enter the SIRT's passcode

Click "Services", in the new window double click choice "PRINTER", in the popup menu select "Active" and press OK

Test the SIRT connection on your handheld.



For testing the SIRT connection or modifying the connection options, you have to have at least the security level of Installer. Check and if necessary modify connection options both for Route Planning and Routes.

Route Planning - start the route planning window with Sensus-RF channel selected and go Tools | Connection Options. Click on the Test button. Wait for the window with the test result, when OK - an info window will appear with address and firmware of the radio card. On error a message will be displayed - then try another COM port.
Routes - go Tools | Connection Options | Sensus-RF and use the same settings.

4.6.1 Sensus-RF Hardware



The **S**ensus **I**nterface **R**adio **T**ool, short SIRT, is an interface between Sensus radio system "Sensus RF" and a stationary or mobile computer. Connection between computer and SIRT will be realized with Bluetooth radio or alternative via an USB connection, where USB will emulate a virtual serial COM Port on computer. SIRT is battery powered and can be recharged with a computer or an USB power supply or via a car cigarette lighter via USB port. SIRT device will work bidirectional and will user allow read and write to Sensus RF radio products.



iPERL is equipped with Sensus low power 868MHz or 433MHz integrated radio technology. Using a 1½ way communication system. It offers both the benefits of one and two way system architecture. The innovative design provides billing and alarm status for walk-by/drive-by collection, plus in addition the ability to interrogate the meter for more detailed data including data logging of up to 2880 values. Along with Sensus Radio, iPERL also offers an OMS certified T1 broadcast platform,

4.6.2 Sensus-RF Address

Sensus-RF radio address formats

Sensus-RT radio addresses can be written in 2 different formats, the decimal format, e.g. 1010-000-0249 or hexadecimal format, e.g. 05F5E1F9.

Hexadecimal format is hexadecimal value of decimal value without leading 1 and hyphens

The SensusREAD can accept both formats, the decimal format can be used with or without hyphens and with or without leading 1.

The meter radio address can be obtained from meter Fab. No. Meter address has same value as numerical part of Fab. No. after manufacturers ID.


E.g. radio address of meter 8SEN01 00000249 is 1010-000-0249.

4.6.3 Sensus-RF Repeaters

The repeaters for the Sensus-RF system are currently under development, please come back later, or look for more information on www.sensus.com.

4.6.4 Sensus-RF Quick Guide

Sensus-RF architecture

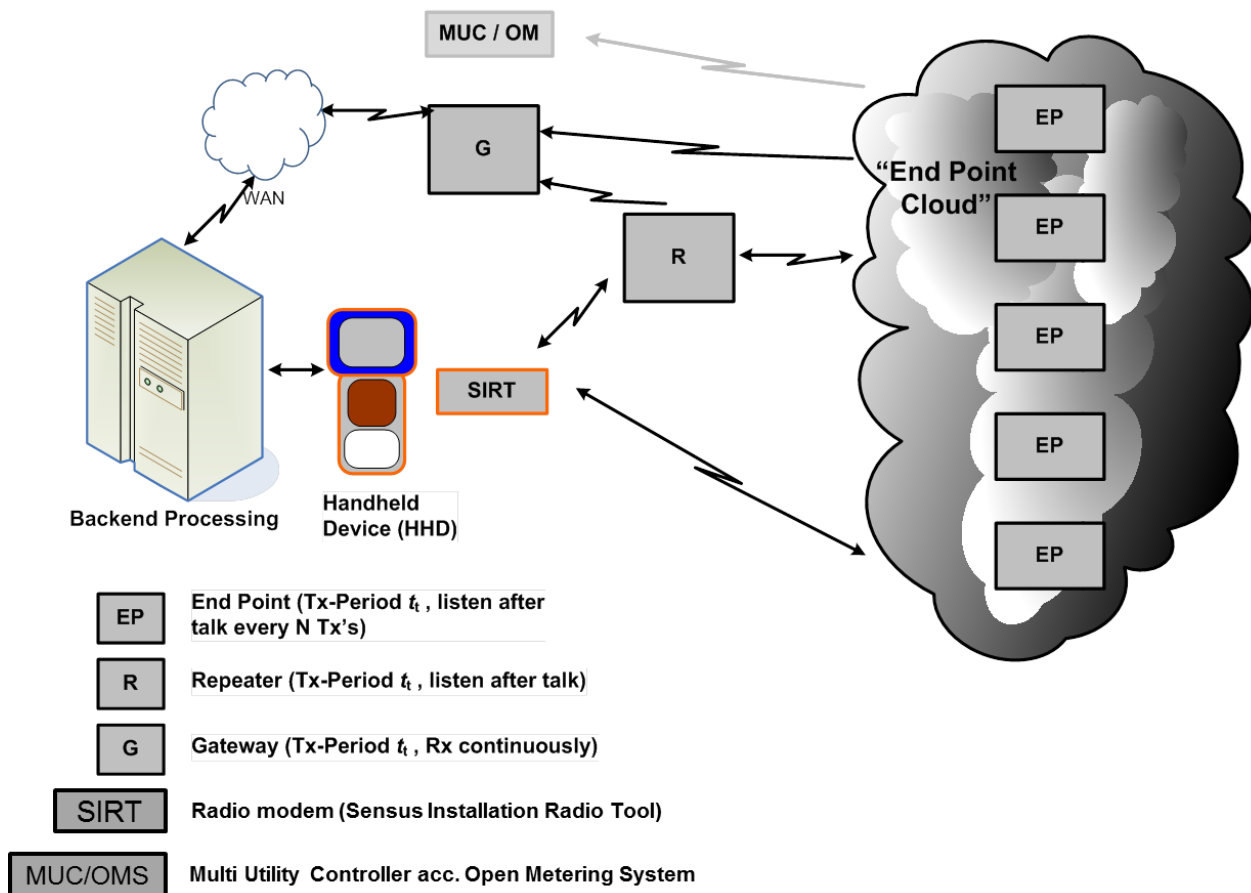


Listen After Talk principle


Sensus-RF end point transmits every Tx period very small telegram (BUP) with basic status information. After N cycles it opens short LAT window and is able to accept commands sent via PAM telegrams. The PAM command is answered by the SEMI telegram which carries full end point information. After PAM reception follow 5 cycles during which are BUPs sent and LAT window is open every 3 sec to allow faster possible request reaction. See schema.

- **LAT** (after every 4th telegram for ~ 5ms)

- **Uni-directional transmissions**

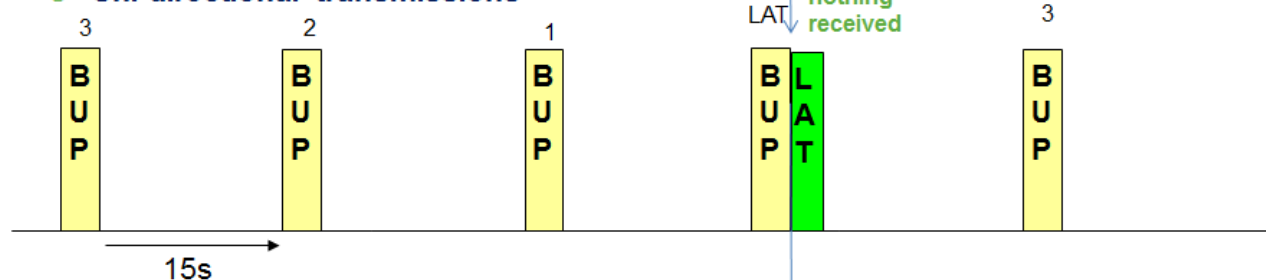

- **Bi-directional transmissions**

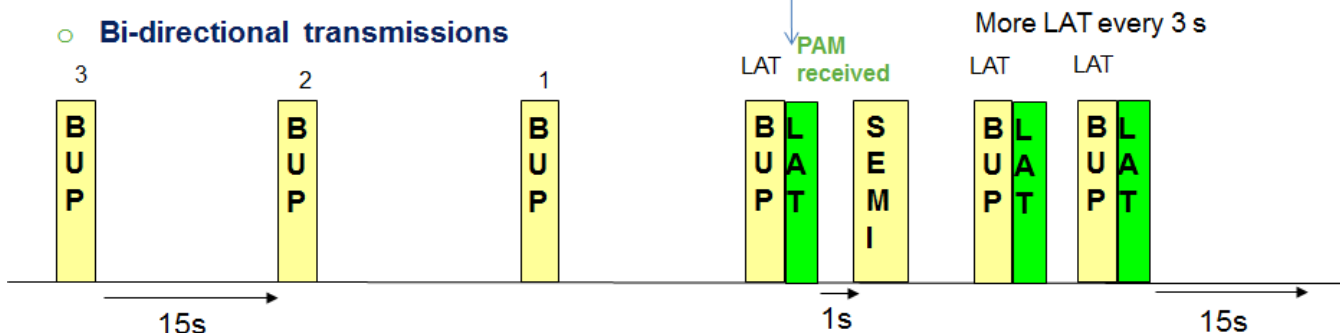

Glosary

BUP	Buble Up Packet - small telegram transmitted by Sensus-RF end points every Tx interval
LAT	Listen After Talk window - short moment during witch is end point listening for incoming requests
PAM	Parameter Application Message - Request telegram sent to endpoints
SEMI	SEtup Message and more Information - Response to SEMI request, caries full end point status information
Tx interval	By default 15 sec
LAT frequency	By default 4 BUP cycles i.e. 1 min

Part



V

5 Quick Start Guide

Meter Reading Items

When the meter reader enters the reading manually or when the software reads the meter via communication channel, there are several items which are collected. The most important and mandatory items which have to be always filled in are:

Time Stamp - the date and time of the meter reading (e.g. 13.12.2011 15:56:01)

Meter ID - the unique identification of the meter (e.g. 93295645)

Index - the value of the main counter of the meter (e.g. 123,9)

Unit - the physical unit of the index (e.g. m3).

There are more items available to collect with the reading anyway this items are optional e.g. Fabrication Number and Comment.

The **Meter ID**, also called serial number or identification number is the serial number of the meter assigned to the meter at the time of manufacture but changeable later. It is an obligatory item for the meter reading and it is not possible to collect a meter reading without this item.

The **Fabrication Number**, also called factory ID, has nothing to do with the Meter ID. The Fabrication Number is assigned to the meter at the time of manufacture and it cannot be changed. It is an optional item and it is possible to collect a meter reading with an empty Fabrication Number.



Always distinguish between **Meter ID** and other identification items for the meter e.g. Fabrication Number. If only one identification item is known for the meter then it is the Meter ID. The Meter ID is mandatory. The Meter ID must to be unique for each meter and is used by the software as the meter identification key. If you happen to have two or more meters with the same Meter ID in your system, you have to modify or extend their Meter IDs otherwise the software will not distinguish between them and their readings will be mixed together in the software database.

5.1 Setting Up Your Hardware

SensusREAD can be used with a wide variety of HH computers and AMR devices. In this section you can find information for setting up some meters and communication devices. However, the list is by no means exhaustive. In general, follow the instructions for setting up the device and its means of communication to a HH running SensusREAD.



Before you proceed to Route Planning or Route Reading, your meters and communication devices has to be completely and correctly installed, attached and connected.

Note that all devices come with their own instruction manuals. You should read and understand how to operate your device before trying to use SensusREAD. Some of the devices must also be assembled before use. If your HH or other device runs off batteries, make sure that you have installed fresh batteries or charged the batteries before you try to use SensusREAD.

Some devices use a Bluetooth (wireless) connection to communicate between the HH and the meters. The process of connecting to the HH is called pairing. The actual steps involved depend on your Bluetooth software, so they are not covered here. Once your HH is paired with the hardware, you use a virtual serial port connection. You need to know the outgoing COM port number assigned by the Bluetooth software in order to correctly configure SensusREAD.

Meter Configuration

Use handheld software, part Route Planning to configure your meters or communication devices.

Run SensusREAD on your handheld.

Click on Route Planning button while making sure, the appropriate communication channel is chosen.

Read the meter using the Read Meter command, this procedure can read one or more meters depending on the channel used and the current hardware configuration.

Select one of the reading table rows and choose Meter | Configure...

Scout modules configuration, Scout-S

SensusREAD enables to configure **only** meters with communication channels Sensus((S))cout and **only** in "Route Planning".

1. Under Route Planning in Sensus((S))cout channel: Meter | Configure... you can find 4 tabs with data to configure:

General: Meter ID and Fabrication number

Basic: Pulse value, Pulse unit, Meter index, Meter unit, Date/Time, Remaining Battery Capacity

Logger: Datalogging mode, Day of Month, Multiplier, Start Hour and Data logger

Events: Tampering, Leakage, Broken pipe, Back flow, with Detection dis/enabled, Detected date and time and Reset

Some data are **read-only**, dependent on the Sensus((S))cout module type.

Scout modules configuration, Scout-MB

Reading the Scout-MB with no connected meters (or invalid configuration) in the Route Planning for the first time will produce the meter line with no index (value), but this line can be used as a starting point for Scout-MB configuration. Choose Meter | Configure... | Detect Meters to force the Scout-MB module to detect the connected meters. You can try the command "Get Meter List" as well. Then go back to the "Route Planning" window again and read the Scout-MB again to retrieve the data from the connected meters.

Add More Information / Edit Meter

In every communication channel you can add more information to the chosen meter by clicking on "Edit Meter". An "Update" window will appear. Now you can add or edit the same information as right after the reading, i.e. Meter ID, Fab. No., Comment, Route, Route sequence, Read point, Read point sequence, Site ID and "Meter is ready for route". Now you can save or cancel the changes.

5.2 Route Planning

Route Planning on the handheld software



Route Planning button on your handheld may be disabled, when the user does not have the proper access level. See details in the Logon section of the Handheld Software User Guide.

Route Planning will be done in situations, when new meters are installed/added to the system, meters or communication devices are exchanged or when SensusREAD is used for the very first time. Route Planning differs for communication channels and used meter types. Further the characteristic procedure for Route Planning of one meter in different communication channels.

Route Planning Example for Manual Channel

1. Run SensusREAD on your handheld.
2. Click on Route Planning button while making sure, the "Manual" communication channel is chosen.
3. Click on "Read Meter", to the appeared window insert Meter ID (mandatory), and other items.
4. Go over to the "Route plan" tab, insert data you know. After inserting "Site ID", the application automatically changes the status of the meter on "Meter is ready for route".
5. Repeat the above steps for more meters or continue with Download Route Planning to PC.

Route Planning Example for MBus Channel

1. Run SensusREAD on your handheld.
2. Click on Route Planning button while making sure, the "MBus (IEC 870)" communication channel is chosen.
3. Wait a little till the communication is established.
4. Click on "Read Meter" and choose if you want to read one meter or use broadcast (all meters), address range (from-to) and baud rate to be used.
5. Wait for the end of communication and if you chose broadcast, the list of read meters will appear. Choose meters you want to work further with.
6. Read meter detail window will appear, insert comment and go over to the "Route plan" tab, insert data you know. After inserting "Site ID", the application automatically changes the status of the meter on "Meter is ready for route".
7. Eventually repeat this procedure till all the read meters are saved or canceled. Or you can use "Save all" button to choose the already set options for Route plan tab (without Site ID).
8. Continue with Download Route Planning to PC.

Route Planning Example for Scout Channel

In this example a Scout-S module is used, the process may vary a little for different modules, but can be used for every meter read by Sensus((S))cout.

1. Run SensusREAD on your handheld.
2. Click on Route Planning button while making sure, the "Sensus((S))cout" communication channel is chosen.
3. Wait a little till the communication is established.
4. Click on "Read Meter" and choose if you want to read one meter, meter list or use broadcast (all meters), module address and eventually repeater addresses (more under Repeaters) to be used.
5. Wait for the end of communication and if you chose more than one meter, the list of read meters will appear. Choose meters you want to work further with.



Wavecards and **Repeaters** can be read by broadcast, but they have no value, have no "Route plan" tab and cannot be added to the Routes.

6. Read meter detail window will appear, insert comment and go over to the "Route plan" tab, insert data you know. After inserting "Site ID", the application automatically changes the status of the meter on "Meter is ready for route".
7. Eventually repeat this procedure till all the read meters are saved or canceled. Or you can use "Save all" button to choose the already set options for Route plan tab (without Site ID).
8. Continue with Download Route Planning to PC.

Download Route Planning to PC

Click Route Planning in the Folder List. Make sure your handheld is connected to the PC. Click the button Download. The download window will be shown. On the "Route Planning" tab you can choose the communication channel you want to work with, and the action that should be taken (no action, download, download and delete) for each channel separately in the channel line, or after choosing the appropriate actions click on "Run All" button in the right down corner. A result window will be shown with the number of inserted, updated, skipped meters and errors.

Browsing the Route Planning Readings

Click Route Planning in the Folder List to browse all the "off-route" meters (sites belonging not linked to any route). Please remember that meters which have been linked to the route will not be shown in this view although you repeatedly read them in route planning and download the data. Such a meter data will be stored together with the linked meter site in Route view.



The meters data can be displayed in several different views, please use the View section of the ribbon bar to switch between them.

5.3 Route Plan to Route

Route Planning data can be used to build a route. Please make sure that the reading of the meter is correct before copying to route.



Do not use route planning meter data for building a route until the reading of the meter results in correct values. Please check the reading result with the meter display to make sure the meter is properly configured.

The only meters in "Route Planning" that can be added to Routes, have to have the flag "Meter is ready for route" active and have a unique Site ID. When trying to add to Routes a meter with the same Site ID as already an added meter in the Route, the older meter will be updated with the new meter data.

PC software - move Route Planning meter to the route

Click Route Planning in the Folder List to browse all the "off-route" meters.

Select meter on the right, or use multi selection to select several meters. Make sure that all the selected meters have Route Ready flag active, that they all use a unique Site ID and proper Route name.

Choose tab More, click on "Route it".
Check the result window with the action report.

HH software - copy Route Planning meter to the route

Run SensusREAD on your handheld.
Click on Route Planning button while making sure, the appropriate communication channel is chosen.
Select the reading table row and choose Meter | Copy to Route.
Check the result window with the action report.

5.4 Route Reading

Preparing Route Data in the PC Software

There are several ways to prepare your route data. You can do it using Route Planning described in the previous topic. You can import the route data from the billing software as described in Importing Data from Other Programs. You can also enter the route data manually - use the command New | Meter Site repeatedly to input all your route meters.

Uploading Route(s) to Handheld

Click Routes in the Folder List. Select the route on the right, or use multi selection to select several routes. Make sure your handheld is connected to the PC. Click the button Upload.

Reading Route(s) on the Handheld


Use your handheld to collect the route readings. See more details in Handheld Software User Guide.

Downloading Route(s) from Handheld

Click Routes in the Folder List. Make sure your handheld is connected to the PC. Click the button Download.

Browsing the Route Readings

After downloading the Route readings, please use the following steps to browse the readings in the PC software. Click Routes in the Folder List. Select the route name on the right and check the total site count and the number of the read meters. It is also useful to check the Progress filed, which shows you the overview of the route status. Finally click on the route name to browse all the meters sites belonging to this route.

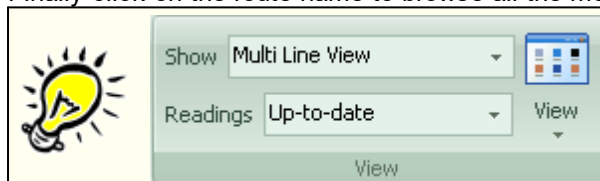

The meter sites data can be displayed in several different views, please use the View section of the ribbon bar to switch between them.

5.5 Importing Data

Importing Data from Other Programs

Click Import Sets in the Folder List. This page shows import sets. Each import set defines a different source and rules for importing the meter site data.

For detailed specification of the import txt files please go to TXT Import File Structure.



SensusREAD can import meter side data from the text files. It is not possible to import readings, only meter and meter site identification data can be imported.

Import of the meter sites can be run repeatedly, the import file is generally considered to be a primary source of the data, it means the SensusREAD information of the existing meter sites will be overwritten with the information from imported file. Please check thoroughly the import set settings if you want to change this behaviour.

How the imported data merges with existing data

By default the imported data are linked to the existing data based on the Site ID column value. Please modify the following settings of the import set if you want to use different or no merging:

Import Data from Dokom Mobile 3.5

The data from the previous version of the software can be imported Dokom 3.5 Data Import dialog. To display the dialog, choose tab Home, button Dokom 3.5 Data Import (or press Alt + H + K).

5.6 Exporting Data

Click Export Sets in the Folder List. This page shows export sets. Each export set defines reusable configuration for exporting data to a different file formats.



SensusREAD export set allows you to define many export parameters including data column selection and counter selection. The easiest way to get familiar with the export is to define a export set a observe the data preview while changing export parameters.

Click Export Sets in the Folder List, select the export set on the right and double click it or create a new one using the button Export. Then use the button Export Preview together with parameter modification repeatedly to achieve the desired export format.

Which data items can be exported.

You can export meter site identification data and also meter readings. The list of all exportable items:

Caption	Description	Category
Route		Route Info
Route No		Route Info
Sequence		Route Info
Point		Route Info
Point Sequence		Route Info
Site ID		Site Info
Site No		Site Info
Street	Street Name	Site Info
StN1	Street Number 1	Site Info
StN2	Street Number 2	Site Info
City Area		Site Info
City		Site Info
ZIP		Site Info
Region		Site Info
Country		Site Info
Site Remark		Site Info
Meter Location		Site Info
Customer ID		Customer Info
Customer Name		Customer Info
Customer Info		Customer Info
Apartment		Customer Info
Floor		Customer Info
Occupant		Customer Info
Ex Meter ID		Billing History
Ex Fab.No.		Billing History
Ex Meter Type		Billing History

Ex Date		Billing History
Ex Value		Billing History
Ex Unit		Billing History
ADC Value	Average Daily Consumption Value	Billing History
ADC Unit	Average Daily Consumption Unit	Billing History
ADC RelDev	ADC permissible deviation [%]	Billing History
AMR Channel	AMR Channel Name	AMR Configuration
AMR Device	AMR Device Name	AMR Configuration
AMR Meter ID		AMR Configuration
AMR Fab.No.		AMR Configuration
MBus Address		MBus (IEC 870)
MBus Baud Rate		MBus (IEC 870)
((S)) Address	((S)) Address	Sensus((S))cout
((S)) R1	((S)) Repeater 1	Sensus((S))cout
((S)) R2	((S)) Repeater 2	Sensus((S))cout
((S)) R3	((S)) Repeater 3	Sensus((S))cout
((S)) Input		Sensus((S))cout
((S)) Unit	((S)) Unit Code	Sensus((S))cout
((S)) Weight	((S)) Pulse Weight Code	Sensus((S))cout
((S)) Wake-up	((S)) Wake-up Period	Sensus((S))cout
((S)) MB Device	((S)) Scout-MB Mbus Device Type ID Number	Sensus((S))cout
((S)) MB Address	((S)) Scout-MB Mbus Device Address	Sensus((S))cout
Flag Address		Flag (IEC 1107)
Ramar Address		RAMAR
Ramar Pulse Offset		RAMAR
Ramar Multiplier		RAMAR
Ramar Multiplier Unit		RAMAR
Ramar Meter Offset		RAMAR
Ramar Meter Offset Unit		RAMAR
Ramar Device Type ID Number		RAMAR
Timestamp		Reading
Date		Reading
Time		Reading
Meter ID		Reading
Fab.No.		Reading
Value		Reading
Comment		Reading
Reader ID		Reading

5.7 Physical Units

If you want to change the physical units used in the software you have to do this both for PC software and also HH software. Changes in PC software will not automatically apply for HH software and vice versa.

PC Software

The units can be changed in the Unit Selection dialog. To display the dialog, choose tab More, button Physical Units (or press Ctrl + W).

All readings made by the SensusREAD are internally stored using the SI Units and can be displayed in the PC software using any other supported unit. SensusREAD will recalculate the measured values according to the selected unit. The measured values are organized to the Counters and the meters which provide more than one value (do not considering stored monthly values), uses more than one Counter.



Unit configuration is stored in the SensusREAD database and applies only for the currently selected database. If you are using more databases, you will need to configure the units for each database separately.

Your selection applies for the SensusREAD PC software in general, for all channels and all meters. Please remember that the selected display units will be used also in your export sets.

Handheld Software

The units can be changed in the Tools | General Options | Physical Units. You cannot change the unit for each counter separately, instead you can choose the predefined unit sets.

Unit Set	Western Europe – m3, MWh, kWh, m3	Eastern Europe - m3, GJ, kWh, m3
Volume (water)	m3	m3
Volume (gas)	m3	m3
Energy (heat)	MWh	GJ
Energy (elec.)	kWh	kWh
Power (heat)	kW	kW
Power (elec.)	kW	kW
Temperature	C	C
Temperature Difference	K	K



Your selection applies for the SensusREAD Handheld software in general, for all channels and all meters, for Routes and also Route Planning. More unit sets can be defined in the future.

Emulator Software

Please use the same procedure as described above for handheld software.

5.8 Language

Installation Program

The language of the installation program can be selected after starting it. The set of the languages available in the installation program might be different from the set of languages available in the software.

PC Software

PC software language can be changed at runtime using the Select Language Dialog. To display the dialog, choose tab More, button Language (or press Ctrl + L).

The set of available languages is changing and the list of the currently available languages is shown in above mentioned dialog window.

Handheld Software

Handheld software language can be changed using the Windows Mobile Control Panel on your handheld:

Please stop SensusREAD if it's running.

Choose Start | Settings | Control Panel | Region and Language

Select the appropriate language

The set of available languages is equal to the PC software language set.

Emulator Software

Emulator software language is automatically set to your Windows OS language (the emulator runs in German on German Windows).

The set of available languages is equal to the PC software language set.




The software can be easily localized to any language. If you need to add a new language or improve the translation for the existing language, please contact Sensus. The tools and documents to localize the software are available from the SensusREAD project manager. See also Localization topic.

Part

VI

6 PC Software User Guide

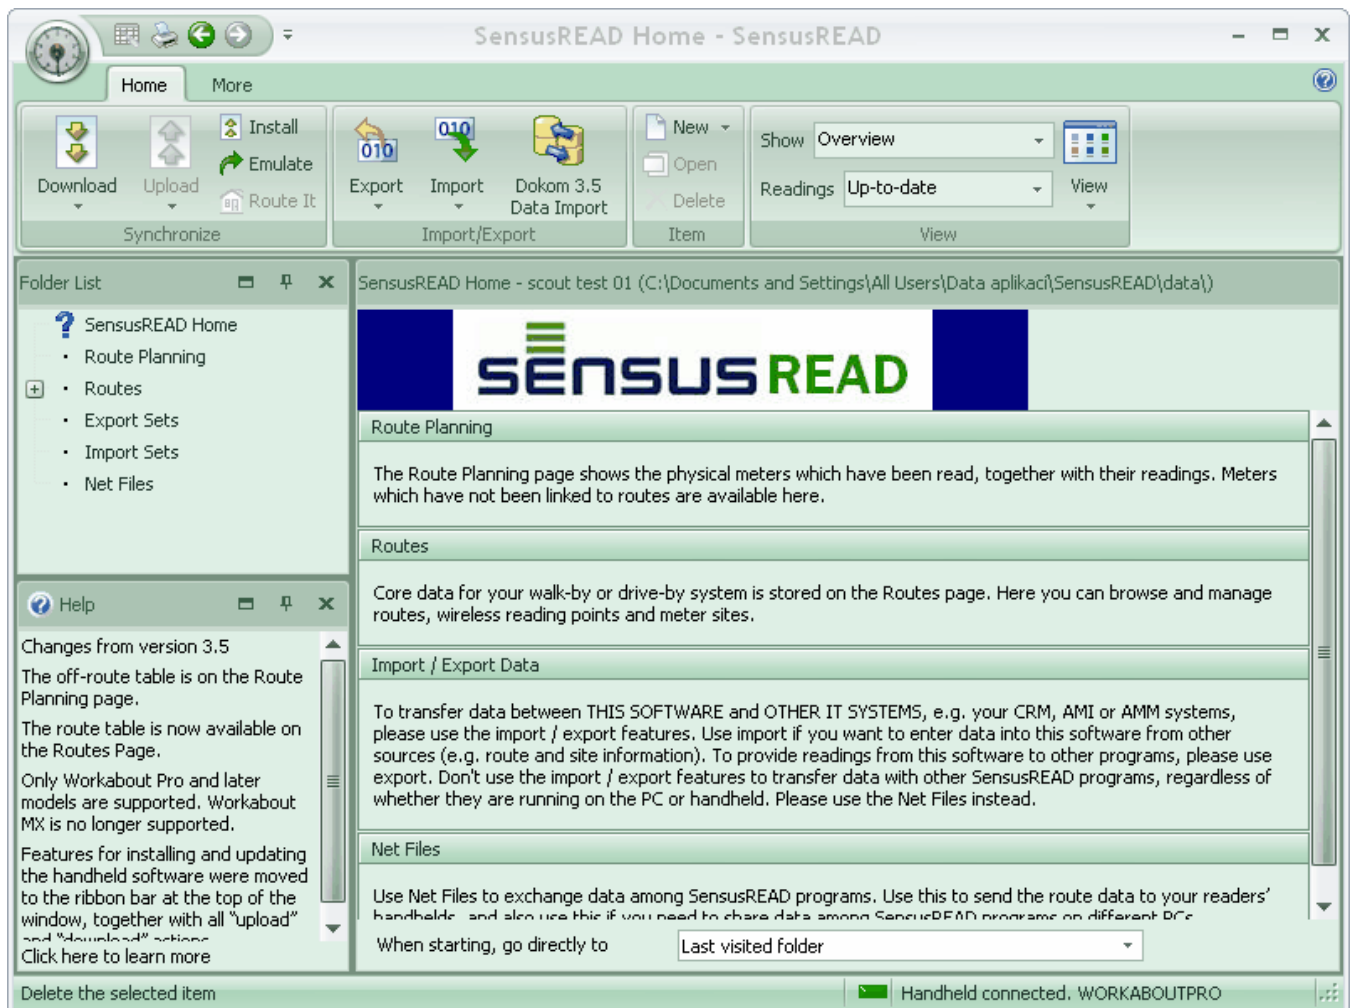

6.1 Folder List

6.1.1 SensusREAD Home

Route Planning

The Route Planning page shows the physical meters which have been read, together with their readings. Meters which have not been linked to routes are available here.

Routes

Core data for your walk-by or drive-by system is stored on the Routes page. Here you can browse and manage routes, wireless reading points and meter sites.

Import / Export Data

To transfer data between THIS SOFTWARE and OTHER IT SYSTEMS, e.g. your CRM, AMI or AMM systems, please use the import / export features. Use import if you want to enter data into this software from other sources (e.g. route and site information). To provide readings from this software to other programs, please use export. Don't use the import / export features to transfer data with other SensusREAD programs, regardless of whether they are running on the PC or handheld. Please use the "Network" features instead.

SensusREAD Net Files

Use a network package to exchange data among SensusREAD programs. Use this to send the route data to your readers' handhelds, and also use this if you need to share data among SensusREAD programs on different PCs.

6.1.2 Route Planning

This page shows physical meters. To see all detailed information about the meter, use the command Open or double click on the meter line.

Meters which are linked to a certain meter site (measuring point) are called on-route meters. Meters which have no such link are called off-route meters. Please do not confuse a physical meter with a meter site. The meter site is a point on the distribution network where a physical meter measures the consumption. The physical meter can be replaced at any time, but the meter site always remains the same. The physical meter is uniquely identified by its Meter ID.

If the DATABASE CONTAINS NO METERS: Please run Download command to download data from your handheld. You can also enter the meter manually, using the New | Meter command.

See also: Route Planning.

6.1.3 Routes

This page shows route list. To rename the route or edit detailed information about the route, use the command Open or double click on the grid line.

To see all route meter sites, click the route name.

To download the route, or routes, use the command Download.

To upload a route, or routes, select the line, or multiple lines (SHIFT) and use the command Upload.

If the DATABASE CONTAINS NO ROUTES: Please run Download command to download data from your handheld.

You can also enter the route manually, using the New | Route command.

You can also require site data from your readers in the form of an SensusREAD Network file. Please use SensusREAD Net File page if you have such a file(s).

See also: Routes.

6.1.3.1 (All) Sequence

Sequence manager shows route list, all meter sites from the selected route and all reading points from the selected route (if any point available).

To change the sequence of an item, drag and drop it or double click the item and edit the sequence number. To

change the sequence of multiple items, select them (SHIFT) and drag and drop them.

To move the meter site from one route to another, select it and drag and drop it to a route.

To move the meter site from one point to another, select it and drag and drop it to a point.

6.1.3.2 (All) Sites

This page shows meter sites. To see all detailed information about the site, use the command Open or double click on the grid line.

Please do not confuse a meter site with a physical meter. The meter site is a point on the distribution network where a physical meter measures the consumption. The physical meter can be replaced at any time, but the meter site always remains the same.

The meter site is uniquely identified by its Site ID.

6.1.4 Import Sets

This page shows import sets. Each import set defines a different source and rules for importing the meter site data.

To edit the selected set, use the command Open or double click on the grid line.

See also: Import.

6.1.5 Export Sets

This page shows export sets. Each export set defines a different rules and target to export the meter site readings. To edit the selected set, use the command Open or double click on the grid line.

See also: Export.

6.1.6 SensusREAD Net Files

This page shows contents of your SensusREAD Net Files Directory (configured in the Program Options | SensusREAD Net Files). There are two types of the SensusREAD Network Files. The first type - SensusREAD Net Files created on the PC software contain route(s) to be sent to the handheld and to be read by the meter reader. To create such a file, click the command New. The second type - SensusREAD Net Files created on the handheld software contain meter readings to be processed here. To open such a file, use command Open. You might first use your E-mail client to receive such a files from your readers and store them in the SensusREAD Net Files Directory.



SensusREAD Net Files Page View

is a standard Windows Explorer window, it means you can perform standard file operations here, like rename, copy and paste files, send the file via email etc..

Typical SensusREAD Net Files usage scenario - using E-mail.

If not already done, please prepare a handheld for your meter reader. Make sure that the SensusREAD is installed on the handheld and that the handheld can connect to the internet at any time. You might consult your handheld supplier about handheld internet connection, e.g. GPRS expansion card.

Manager selects the routes which should be processed by the reader.

Manager creates a SensusREAD Net File on your PC from the desired route selection and send it via email to the meter read email account.

When sending the Net File to the handheld reader address, please set always the email subject to "Net File N2H".

...

Meter reader can check his email account at any time to receive an emails with the SensusREAD Net Files. When receiving such a file he can start reading the routes.

Meter reader collects some (all) readings.

Meter reader creates a SensusREAD Net File on his HH and send it via email to the manager email account.

All emails send from the handheld software have the email subject set to "Net File H2N".

...

Manager checks his email account in his PC email client software and he founds a Net File in the attachment. Now he double clicks the attachment and SensusREAD will download the readings from this file.

SensusREAD Handheld Software Email Support



SensusREAD Handheld Software Email Support

The current version of the software on the handheld supports only POP3/SMTP email servers without the SSL encryption. Unfortunately most of the SMTP servers require SSL authentication.

Few Websites like the one listed below provide you an option to disable SLL authentication. These sites allow you to use them as SMTP servers that does not require SSL authentication

SMTP Server Settings for Inmail24.com

SMTP Server Address : (smtp/pop3).inmail24.com User name : xyz@inmail24.com Password : *

To use it as a SMTP

Sign up for an account on the website inMail24.com

Note down the User name and Password for the account

Sample of the handheld software configuration for the email access:

A screenshot of a 'Mail configuration' dialog box. It contains several text input fields: 'E-mail address' with 'reader.sread@inMail24.com', 'User name' with 'reader.sread@inMail24.com', 'Password' with '*****', 'Incoming mail server' with 'pop3.inMail24.com', 'Outgoing mail server' with 'smtp.inMail24.com', and 'Recipient E-mail address' with 'manager.sread@inMail24.com'. At the bottom are 'OK' and 'Cancel' buttons.

The password
for both sample accounts
reader.sread@inMail24.com
and
manager.sread@inMail24.com
is
sread

6.2 Dialogs

This section provides a reference to the individual controls in the dialogs used in the software.

Only dialogs that need explaining are documented

Please note that although this reference is quite complete, only dialogs that really need explaining are documented. For example, we assume that you can figure out what menu entries like Save and Save As do for yourself. This also applies to simple dialogs whose functions are explained elsewhere.

6.2.1 Choose Your AMR Channels

This window is shown only when the software is being used for the first time.

Before you begin using SensusREAD for the first time, you need to specify the type of AMR channel you use, such as MBus or Sensus((S))cout. If you use more than one channel, please choose all of them. SensusREAD uses this information to apply a predefined collection of settings to the user interface. You can choose to use a different collection of settings at any time. From the Tools menu, choose Options and then Channels.

Choose your AMR channels:

Manual readings are always available. If you are using only the manual reading, please don't select any of the AMR channels.

Description:

M-Bus (Meter-Bus) possible usages: Reading MBus meters on a wired bus via MBus master, or reading meters via inductive or optical probes.

Sensus((S))cout. This is a wireless network for walk-by or drive-by meter reading using Scout modules such as Scout-P, Scout-S or Scout-Mei.

FLAG (IEC 61107, formerly called IEC 1107) possible usage: Reading utility meters via optical probes.

RAMAR. This is a wireless network for walk-by or drive-by meter reading using Ramar radio modules such as the Ramar impulse transponder or MiniBus transponder.

Sensus protocol (Harry interface) possible usage: Reading Sensus meters using the SmartGun device.

Handheld with a serial COM port (RS-232 or TTL interfaces) required.

Handheld with a serial COM port (RS-232 or TTL interfaces) or USB port required.

Handheld with internal WaveCard or USB WaveCard required.

Handheld with the HandTrack device required.

Handheld with the SmartGun device required.

6.3 Using Data Grids

Data Grid Elements

Each data grid view consists of grid view elements. They have different functionality:

- Data representation (Cells, Data Markers)
- Navigation (Indicator)
- Data arrangement (Bands, Columns, Group By Box, Filter Panel, Card, Categories, Series)
- Analysis and summary (Group and Grid Footer Panels)
- Description (Preview Section, Chart Legend)

Data grids provide other features to help display records in a more convenient form. These features include sorting, grouping, filtering, summary calculation, previewing a specific column and incremental search support. The grid control enables the user to switch among several views. The views differ in the set of the available data fields and their visual arrangement. Some grids support only one view.

Selecting Records

You can select one record or multiple records within a view. Some multi line views do not allow the selection of multiple rows, but you can switch to single line views to use multi selection. This is implemented by navigating a view with the Ctrl or Shift keys pressed. This applies to keyboard and mouse navigation. The Shift key is used to select a range of rows, and the Ctrl key is used to select non-sequential rows.

Cells

ID	Product Name	Unit Price
1	Chai	\$18.00
2	Chang	\$19.00
3	Aniseed Syrup	\$10.00
4	Chef Anton's Cajun Seasoning	\$22.00
5	Chef Anton's Gumbo Mix	\$21.35
6	Grandma's Boysenberry Spread	\$25.00

Cells

Cells display field values from particular records and, thus, stand at the intersection of a column and row (card row and card). In Chart views, category values and data markers represent field values.

Column Header

Unit Price
\$15.50
\$16.25
\$17.00
\$17.45

Column Header

Column headers are displayed at the top of each column. They display information about the corresponding column's content and allow the manipulation of columns, e.g. sorting by column values, reordering columns, changing columns' size, etc. Column headers may reside within the column header panel (if the corresponding

column is visible), within the customization form (if the corresponding column is hidden) and within the Group by box (if the view is grouped by this column's values). By default, the column header panel's height depends on the style (font settings, in particular) assigned.

Column Header Popup Menu

This menu is invoked by right-clicking on a column header. It allows the user to:

- sort in ascending order;
- sort in descending order;
- group using the selected column;
- enable/disable the Group By box;
- remove the selected column;
- display the Customization form;
- set column content alignment;
- apply the Best Fit feature to the column;
- apply the Best Fit feature to all columns.

Footer Panel

To enable Footer Panel you have to right-click on some field in header of the table and choose **Footer**.



Footer panels are displayed at the bottom of the table. Commonly, such panels are used to display total summaries but you can also display any custom information you need if the chosen data enables it (i.e. sum, min, max, count, average and default value: none) by right-clicking on the corresponding place of the appropriate field on the footer panel.

The Footer Popup Menu allows you to specify the required summery types or to disable summary calculation via the None option.

A footer summary is calculated against all records within an entire grid control.

Summaries

Summaries allow you to calculate totals of specific columns against a group of records or all records in a view. There are two types of summaries provided by the grid control: footer summaries and group summaries.

Footer summaries are calculated against all the records in the view and the resulting values are displayed within the footer panel at the bottom of the view. Group summaries are calculated for records of each view group. Their results can be displayed either within the group rows or within group footer panels.

The grid control gives you the ability to calculate five built-in summaries:

- Sum
- Average of values
- The number of records
- Maximum value
- Minimum value

6.3.1 Data Searching

The incremental search functionality allows the user to locate records in a grid view by matching the initial characters of a record field.

To search a record by a field value, focus on a record cell within the appropriate column and type the search text. If a view contains a record with a value that starts with the search text, the record is focused.

The 'mi' characters are pressed. As a result, the first 'Mickey Alcorn' record is located.

Drag a column header here to group by that column		
Customer	Payment Type	Payment Amount
Karen Holmes	Cash	\$83,800.00
Mickey Alcorn	Visa	\$251,400.00
Mickey Alcorn	Master	\$251,400.00
Jimmie Jones	Am. Express	\$335,200.00
Jimmie Jones	Master	\$83,800.00
Bobbie Valentine	Cash	\$167,600.00
Mildred Johansson	Cash	\$251,400.00
Bobbie Valentine	Am. Express	\$419,000.00
Jimmie Jones	Master	\$251,400.00

The 'l' character is pressed after 'mi' and the focus is moved to the 'Mildred Johanson' record

Drag a column header here to group by that column		
Customer	Payment Type	Payment Amount
Karen Holmes	Cash	\$83,800.00
Mickey Alcorn	Visa	\$251,400.00
Mickey Alcorn	Master	\$251,400.00
Jimmie Jones	Am. Express	\$335,200.00
Jimmie Jones	Master	\$83,800.00
Bobbie Valentine	Cash	\$167,600.00
Mildred Johansson	Cash	\$251,400.00
Bobbie Valentine	Am. Express	\$419,000.00
Jimmie Jones	Master	\$251,400.00

When the first record is located, you can continue searching. To search forward and backward, press the **Ctrl+DownArrow** and **Ctrl+UpArrow** keys respectively.

6.3.2 Data Sorting

Tabular views represent data in columns, each of which has a caption displayed within the column header panel. The user can click on the column header to sort data by the column's content. To sort by multiple columns, column headers should be clicked while holding down the **Shift** key. When data is sorted by a column, a small arrow is displayed in its caption indicating the current sort order. You can stop sorting against a particular column by clicking its header again while pressing the **Ctrl** key.


When data is sorted by multiple columns, the order in which you apply sorting is important. Sorting orders the data according to the first sort column specified. Other column values only come into play if earlier column(s) data is identical.

6.3.3 Data Grouping

To enable Data Grouping you have to right-click on a column header and choose **Group By This Field** or **Group By Box**. This action makes a group panel (extra row above the header) visible where the fields for grouping can be dragged.

Group By Box

The Group by box displays the headers of the columns that are involved in grouping (if any). This box also enables end-users to group a view's data by serving as a drop target for column headers. If enabled, this box is displayed at the top of the view.

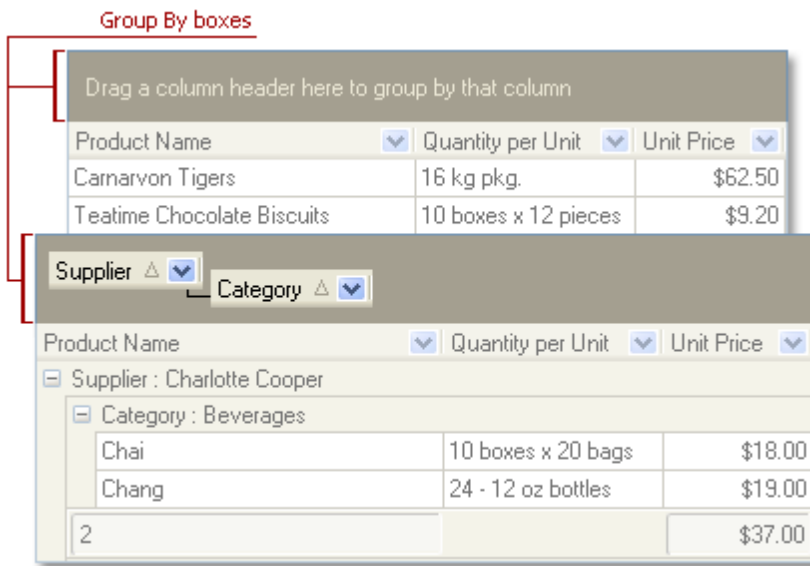

When data in a grid view is grouped, records with the same value in the grouping column make up a group and the grid view's content is displayed in a tree-like manner.

The user can easily group data by dragging a column caption to this panel and then ungroup data by dragging it back to the **column header panel**. When a user drags a column caption, two green arrows indicate the position where the column will be placed. The column dragged to the group panel is hidden within a view. Its header is now within the group panel and its values are displayed within group rows.

Grouping can be performed against multiple columns. A user can move column captions within the group panel to change the group order.

6.3.4 Data Filtering

The grid allows the filtering of data displayed by creating filter conditions. When filtering is applied, only the records matching all filter conditions set in the view are displayed.

By default, every column has a down-arrow button at the left edge of its caption. Clicking this button displays a dropdown list containing unique values from the current column.

When a user selects a value from this list, a new EQUAL filter condition of type "**Column = Value**" is added to the existing filter criteria.

Selecting **All** from the list clears the filter condition for that column. The **Custom** item displays a filter dialog, enabling a user to define filter conditions with other operators (=, <>, <, <=, >, >=, LIKE and NOT LIKE).

Filtering allows to display a subset of records from a data source. The grid control allows you to construct complex filter criteria by combining simple filter conditions with logical operators for individual items (columns in (banded) table views).



When filtering is applied, the filter panel appears with a description of the filter criteria. You can temporarily deactivate and then activate filtering by clicking the checkbox on this panel. The 'x' button clears all the filter criteria applied.

All the filter criteria applied are remembered until the filter is cleared by the user, i.e. a filter once applied on one view is still applied when re-opening the same view. Even closing the program does not clear the filter criteria.

Filter Panel

Filter Panel

Company Name	Payment Type	Copies	Payment Amount
Hillsborough and Associates	American Express	5	\$1,249.95
American Standard Systems	American Express	5	\$649.95
Automotive Group of America	Visa	4	\$359.96
Holmes Word	American Express	6	\$1,799.94
James Systems	Master Card	5	\$1,499.95

✕ ☑ (Copies > 3) Customize...

Filter MRU List Button

The current filter criteria

Enables/disables the current filter

Clears the filter

Invokes the Filter Builder Dialog

(Copies > 3) ▼

(Payment Type = Visa) and (Payment Amount > 300)

(Copies < 3)
 (Copies <> 3)
 (Copies = 3)

Filter Dropdown for the Filter Panel

Filter Dropdown List

With filter dropdowns, you can filter records in tabular views by the values of grid items (column). To invoke a filter dropdown for a grid item, click its filter dropdown button. When a grid item is used to create a filter, its filter dropdown button is displayed in blue.

The (All) and (Custom...) items are always added to the list. Selecting the (All) item removes all the filter conditions set for the current column. The (Custom...) item invokes the **Filter Builder** dialog which allow you to visually construct the filter criteria for the given column or current view, respectively. (Blanks) and (NonBlanks) elements are added automatically if your column contains NULL and non-NULL values, respectively.

When a user selects a value from the list (any item other than All, Custom, Blanks or NonBlanks), a new filter condition is created and applied to the data in the current view.

Filter Builder Dialog

Selecting the **(Custom)** item from the filter dropdown list activates the **Filter Builder** dialog.

This dialog allows you to specify the filter criteria for a single column consisting of one or two filter conditions. You can also specify the operator for these conditions. Click the 'press button to add new condition' box. This will add a new condition to the criteria. Alternatively, you can left-click on the **Filter** box and select the **Add Condition** option from the dropdown menu. To apply the filter criteria to the column, left-click the column box (next to the ellipsis button) to open the dropdown list displaying the available column names. Now this filter condition can be applied to the view by clicking the **Apply** button. The grid view now displays only the records matching the set criteria.


Saving to/Loading from an External File

The **Filter Builder** dialog allows you to save filter criteria to and load them from an external file. Clicking the **Save As...** or **Open...** buttons activates one of these dialogs.

Filter settings are stored in a file with a **flt** extension. A column in the file is referenced by its name (not by its position in a view). This means that filter settings are correctly restored if columns were deleted from the view after saving the filter to a file.

6.3.5 Quick Column Customization

Quick Column Customization Button

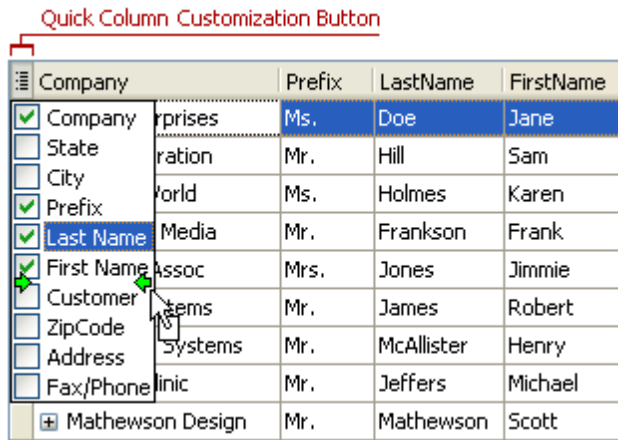

The Quick Column Customization button is displayed at the intersection of the column header panel and the indicator. Clicking this button invokes the Quick Column Customization dropdown, which displays column names in a checklist. Users are able to toggle columns' visibility and reorder columns by dragging items in the dropdown. Multiple items can be selected by clicking them while holding down the Shift and Ctrl keys.

Quick Band Customization Button



The Quick Band Customization button is displayed at the intersection of the band header panel and the indicator. Clicking this button invokes the Quick Band Customization dropdown, which displays band names in a checklist. Users are able to toggle bands' visibility and reorder bands by dragging items in the dropdown. Multiple items can be selected by clicking them while holding down the Shift and Ctrl keys.

Part




7 HH Software User Guide




7.1 Main Window

Window SensusREAD

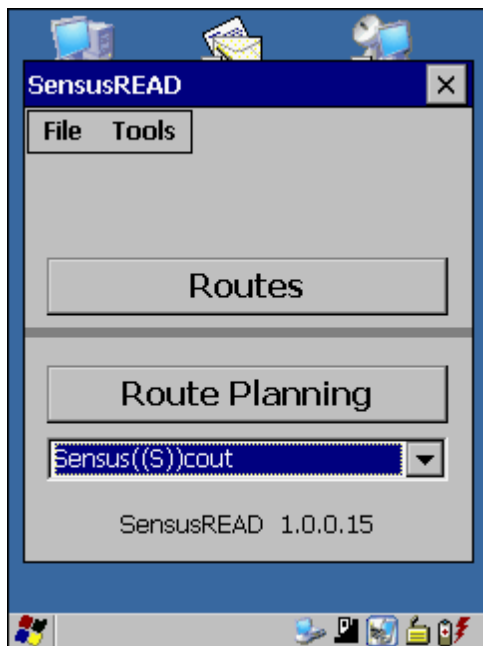


Menu File
 Logon
 Routes
 Route planning
 Copy plan to routes
 Create network file...
 Open network file...
 Receive network file...
 Create backup
 Restore backup...
 Restore backup...
 Menu Tools
 General options...
 Network file options...
 Backup options...
 E-mail options...
 Logon options...
 Routes
 Route Planning
 Channel

Window Logon

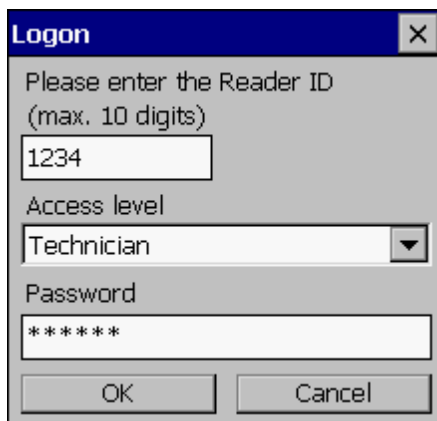


Reader ID
 Access level
 Reader
 Technician
 Installer
 Expert
 Password

Window General options

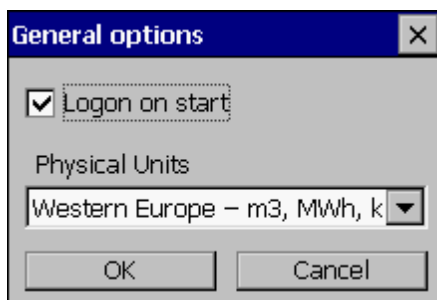

Logon on start
 Physical Units


Window Logon Options

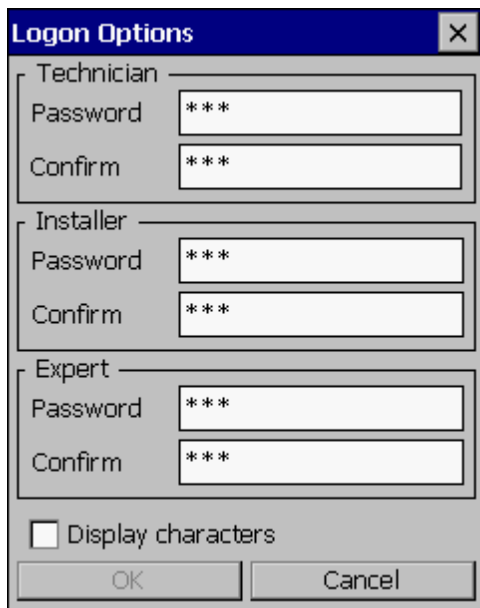

The **Logon Options** dialog box contains three sections for user authentication: Technician, Installer, and Expert. Each section has a Password field and a Confirm field, both masked with asterisks. At the bottom, there is an unchecked checkbox labeled "Display characters" and two buttons: "OK" and "Cancel".

Technician
 Password
 Confirm
 Installer
 Password
 Confirm
 Expert
 Password
 Confirm
 Display characters


Window Backup restore

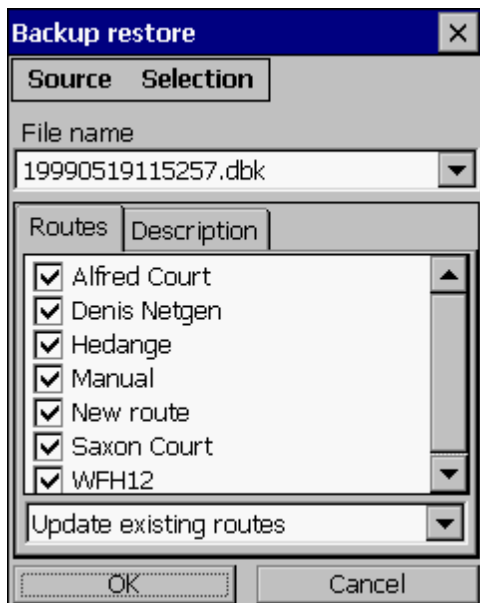

The **Backup restore** dialog box has a "Source Selection" tab. It features a "File name" field with a dropdown arrow, currently showing "19990519115257.dbk". Below this is a list box with two tabs: "Routes" (selected) and "Description". The "Routes" list contains seven items, each with a checked checkbox: Alfred Court, Denis Netgen, Hedange, Manual, New route, Saxon Court, and WFH12. At the bottom of the list box is a dropdown menu set to "Update existing routes". The dialog concludes with "OK" and "Cancel" buttons.


Menu Source
 Select Backup File
 Menu Selection
 Select All
 Unselect All
 File name
 Routes
 List Routes
 Update Mode
 Update existing routes
 Replace existing routes
 Replace all routes
 Description

Window Backup options

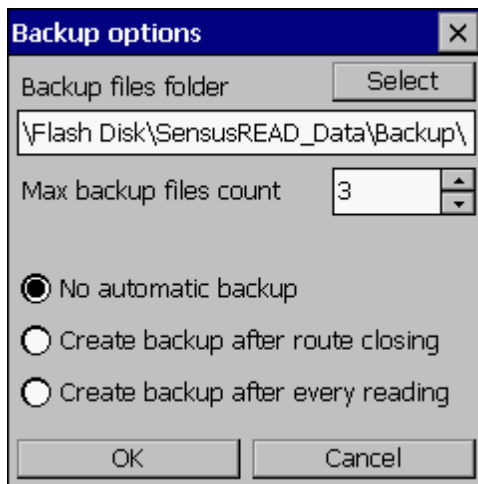


Backup files folder
Select
Max backup files count
No automatic backup
Create backup after route closing
Create backup after every reading

Window Create Net file

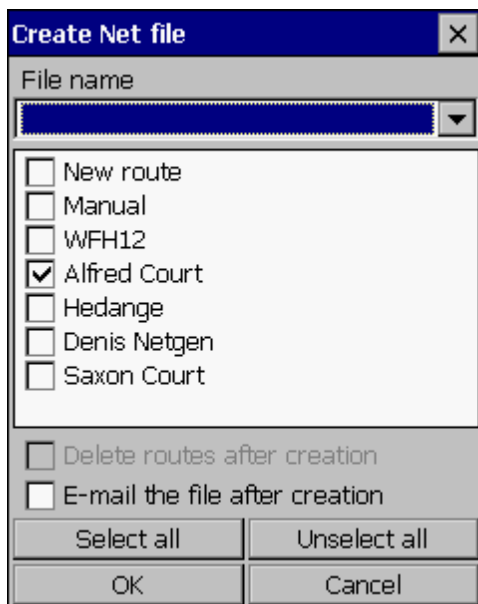

File name
List Routes
Delete routes after creation
E-mail the file after creation
Select all
Unselect all

Window Receive Net files

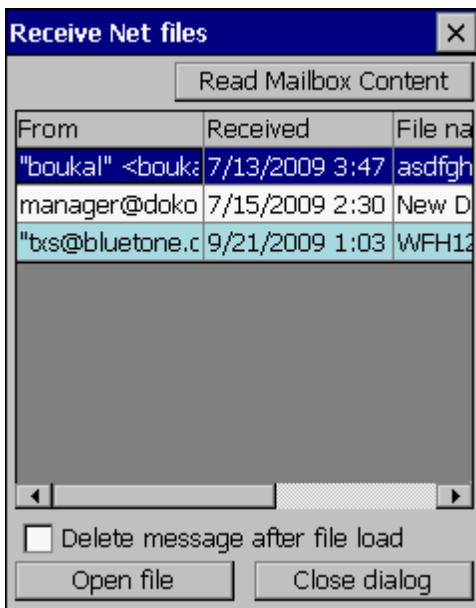


Read Mailbox Content
Grid Messages List
Delete message after file load
Open file

Window Net file load




Routes
List Routes
Select all
Unselect all
Update mode
 Update existing routes
 Replace existing routes
 Replace all routes
Description

Window Net file options

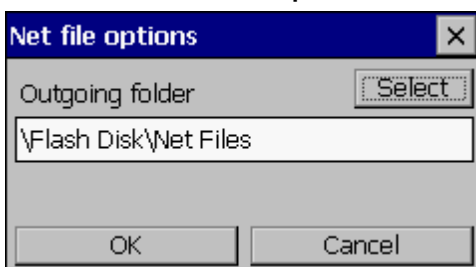

Outgoing folder
Select

Window Mail configuration

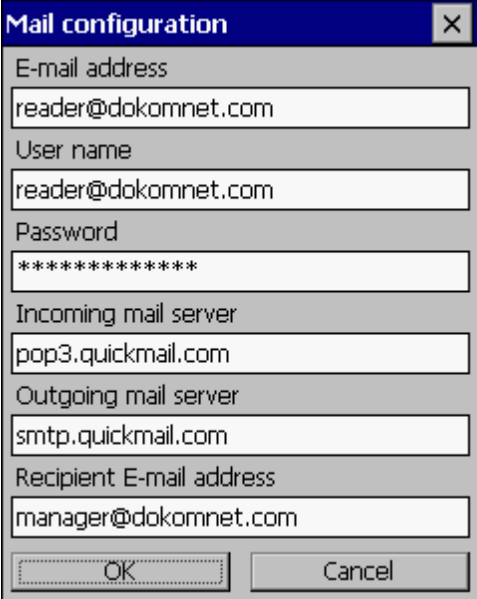

The image shows a 'Mail configuration' dialog box with a blue title bar and a close button (X). It contains several text input fields and two buttons at the bottom: 'OK' and 'Cancel'. The fields are labeled as follows:

- E-mail address: reader@dokomnet.com
- User name: reader@dokomnet.com
- Password: *****
- Incoming mail server: pop3.quickmail.com
- Outgoing mail server: smtp.quickmail.com
- Recipient E-mail address: manager@dokomnet.com

To the right of the dialog box, a list of labels is provided for reference:

- E-mail address
- User name
- Password
- Incoming mail server
- Outgoing mail server
- Recipient E-mail address

7.2 Readout Status

List of the values in the column Readout Status

OK = meter was read, value is known, no events (alarms)

xx = meter was read, value is known, event(s) occurred Warning, Alarm or Error

ii = meter was read, value empty, reader comment is available

-- = meter was not read

7.3 Routes

Window Routes

Routes		
Route	Done	Total
New route	5	5
Manual	0	5
Saxon Court	1	591
Alfred Court	1	126
Hedange	3	18
Denis Netgen	3	9
<div>Open</div> <div>Close</div>		

Grid Routes
Open

Window Route

Saxon Court - 0/66				
Meter View Tools				
Meters Details				
#	Street	Meter ID	Fab.	
-- 37	Ethelred Cour	05549618	A 01	
-- 38	Ethelred Cour	05549617	A 00	
-- 39	Ethelred Cour	05549616	A 00	
-- 40	Alfred Court	06553605	A 00	
-- 41	Alfred Court	06553611	A 00	
-- 42	Alfred Court	06553593	A 00	
-- 43	Alfred Court	06553603	A 00	
-- 44	Alfred Court	06553601	A 00	
<div>Read</div> <div>Read All</div>				

Menu Meter
 Read
 Read All
 Manual...
 Create Net File...
 Create Backup
 Close
 Menu View
 Columns...
 Tabs
 Details
 Readout
 Events
 Log
 Filter
 None
 R. point
 Channel
 Status
 Communication Log...
 Menu Tools
 Connection Options...
 Reading Options...

Walk-by Options...
Meters
Filter
Grid Meters
Details
Readout
Events
Log
Read
Read All

Window Route Select columns


Select columns

☒ #
☒ Point
☒ Point #
☐ Point GPS
☒ Site ID
☒ Street
☐ No. 1
☐ No. 2
☒ Location
☐ Site GPS
☐ Remark
☐ Customer No.
☒ Customer
☒ Meter ID

OKCancel

Point
Point #
Point GPS
Site ID
Street
No. 1
No. 2
Location
Site GPS
Remark
Customer No.
Customer
Meter ID
Fab. No.
Date (LR)
Value (LR)
Unit (LR)
A.D.C.
ADC Deviation
Meter config.
Manual
Meter ID (CR)
Fab. No. (CR)
Date (CR)
Value (CR)
Unit (CR)
Comment
Meter config. (CR)
Reader ID
Channel
Type

Window Walk-by options

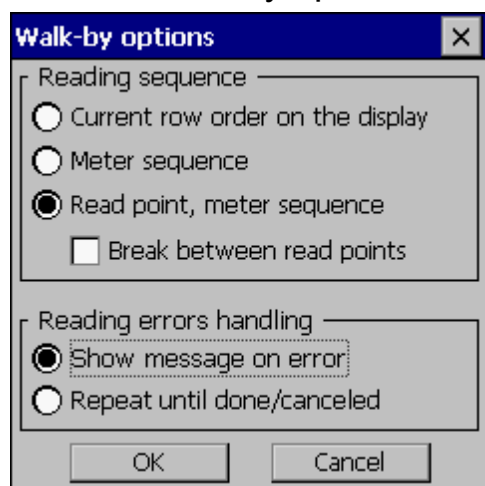

Walk-by options

Reading sequence

☐ Current row order on the display
☐ Meter sequence
☒ Read point, meter sequence
☐ Break between read points


Reading errors handling

☒ Show message on error
☐ Repeat until done/canceled

OK Cancel

Current row order on the display
 Meter sequence
 Read point, meter sequence
 Break between read points
 Show message on error
 Repeat until done/canceled

Window Route Reading Edit

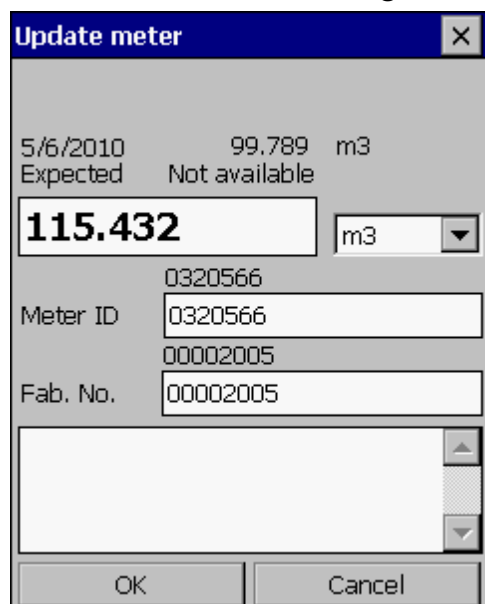

Update meter

5/6/2010 99.789 m3
 Expected Not available

115.432 m3


Meter ID 0320566
 0320566

Fab. No. 00002005
 00002005

OK Cancel

Last
 Expected
 Value
 Unit
 Meter ID
 Fab. No.
 Comment

Window Route Reading Error

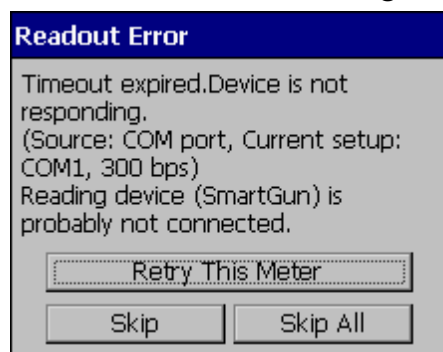

Readout Error

Timeout expired. Device is not responding.
 (Source: COM port, Current setup: COM1, 300 bps)
 Reading device (SmartGun) is probably not connected.

Retry This Meter

Skip Skip All

Message
 Retry This Meter
 Skip
 Skip All

Window Route Progress

Progress

.03318849 reading index

Saxon Court 1/66

1/1

Meter in cupboard at side of building

Cancel

Action
Progress
Location Remark
Cancel

Window Communication Log

Log X

21:50:10.672 Connecting...

21:50:12.762 Connected to COM

21:50:12.919 Wavecard reset

21:50:12.932 Clearing DTR...

21:50:13.497 Setting DTR...

21:50:14.500 Wavecard initial

21:50:14.546 >> FF|02|07|40|C

21:50:14.726 << FF|02|04|06|5

21:50:14.728 >> FF|02|04|06|5

21:50:14.814 >> FF|02|06|40|C

21:50:14.967 << FF|02|04|06|5

21:50:14.970 >> FF|02|04|06|5

21:50:15.127 >> FF|02|06|40|C

21:50:15.310 << FF|02|04|06|5

21:50:15.312 >> FF|02|04|06|5

21:50:15.407 WaveCard initial

21:50:15.411 >> FF|02|05|50|C


21:50:15.588 << FF|02|04|06|5

Save Close

Save

7.4 Route Planning

Window Route Planning

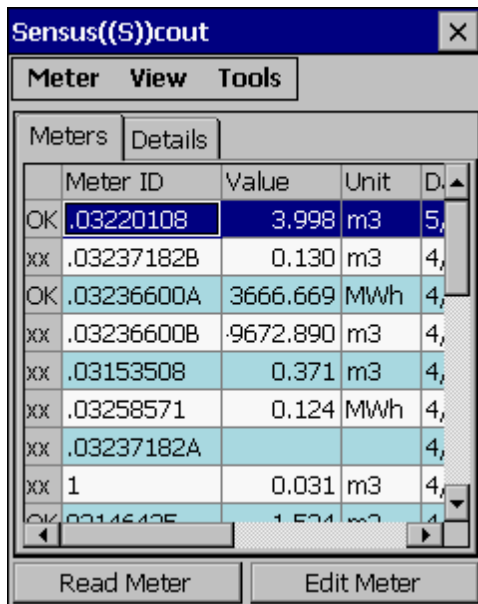


	Meter ID	Value	Unit	D.
OK	.03220108	3.998	m3	5,
XX	.03237182B	0.130	m3	4,
OK	.03236600A	3666.669	MWh	4,
XX	.03236600B	9672.890	m3	4,
XX	.03153508	0.371	m3	4,
XX	.03258571	0.124	MWh	4,
XX	.03237182A			4,
XX	1	0.031	m3	4,
OK	.03146425	1.524	m3	4,

Read Meter Edit Meter

Menu Meter
 Read
 Configure...
 Check RSSI Level
 New...
 Edit...
 Copy to Route
 Delete
 Delete All
 Close
 Menu View
 Columns...
 Tabs
 Details
 Readout
 Events
 Log
 Communication Log...
 Menu Tools
 Connection Options...
 Reading Options...
 Meters
 Details
 Reading
 Events
 Log
 Read Meter
 Edit Meter

Window Select columns

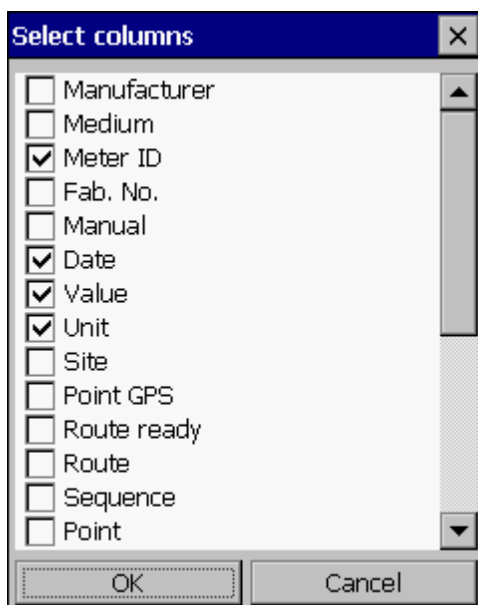

Select columns

☐ Manufacturer
☐ Medium
☒ Meter ID
☐ Fab. No.
☐ Manual
☒ Date
☒ Value
☒ Unit
☐ Site
☐ Point GPS
☐ Route ready
☐ Route
☐ Sequence
☐ Point

OK Cancel

Manufacturer
 Medium
 Meter ID
 Fab. No.
 Manual
 Date
 Value
 Unit
 Site
 Site GPS
 Route ready
 Route
 Sequence
 Point
 Type
 Address
 Baudrate
 R. point order
 Point GPS

- Input
- Repeater 1
- Repeater 2
- Repeater 3
- Mbus address
- Meter type
- Wake-up period
- Transponder ID

Window Results

Results

Meters read: 4
New meters: 0
Invalid: 0

☒ .03156850-A: Scout-P4, 8501.12
☒ .03156850-B: Scout-P4, 85020
☒ .03156850-C: Scout-P4, 85
☒ .03156850-D: Scout-P4, 8504.12

Select AllSelect New

OKCancel

- Meters read
- New meters
- Invalid
- List Meters
- Select All
- Select New

Window Offroute Reading Edit

Update 1/4

ReadoutRoute

Meter ID .03156850A

Fab. No. .03156850A

Type Scout-P4

8501.120Unit m3


Comment

SaveCancel

Save All

- Readout
- Meter ID
- Fab. No.
- Type
- Value
- Unit
- Comment
- Save
- Save All
- Route
- Route
- Sequence
- Read Point
- Sequence
- Site ID
- Meter is ready for route
- Save
- Save All


Window Offroute Progress

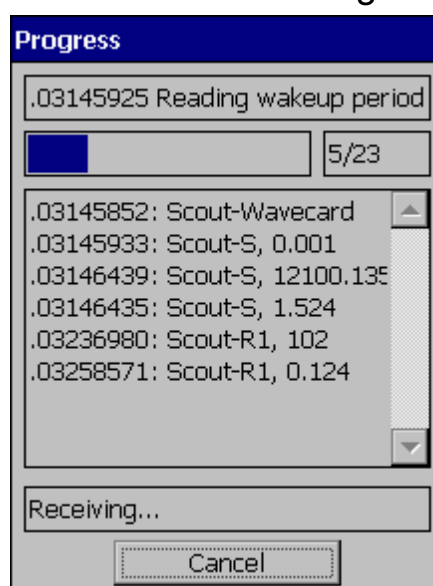

Action
Progress
Results
Communicator Status
Cancel


7.5 Manual

Window Offroute Reading Options

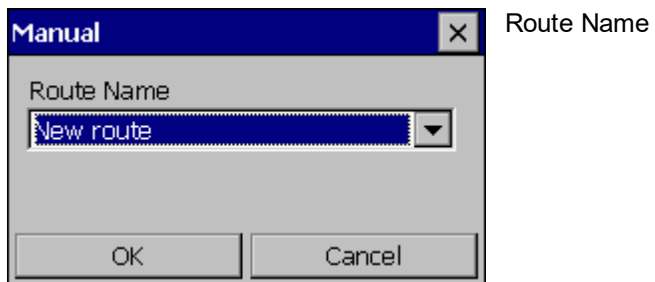

7.6 MBus

Window New Meter

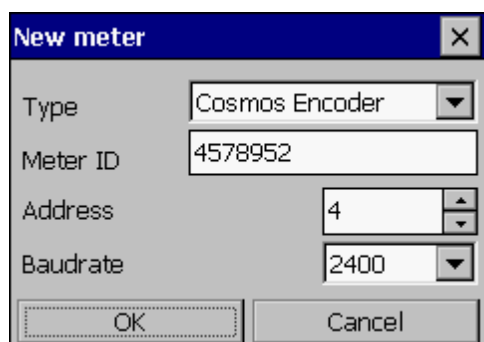


The 'New meter' dialog box contains the following fields and controls:

- Type:** A dropdown menu with 'Cosmos Encoder' selected.
- Meter ID:** A text input field containing '4578952'.
- Address:** A numeric input field with up/down arrows, containing '4'.
- Baudrate:** A dropdown menu with '2400' selected.
- Buttons:** 'OK' and 'Cancel' buttons at the bottom.

Type
Meter ID
Address
Baudrate

Window Connection options

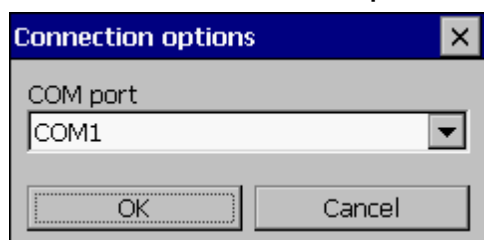


The 'Connection options' dialog box contains the following fields and controls:

- COM port:** A dropdown menu with 'COM1' selected.
- Buttons:** 'OK' and 'Cancel' buttons at the bottom.

COM port

Window Offroute Reading Options

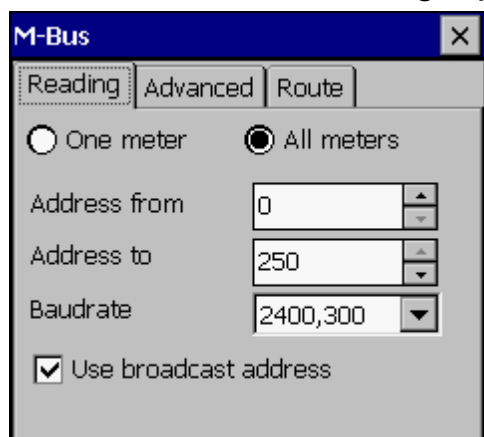


The 'M-Bus' dialog box has three tabs: 'Reading' (selected), 'Advanced', and 'Route'. The 'Reading' tab contains the following options:

- Reading:** Two radio buttons, 'One meter' and 'All meters' (selected).
- Address from:** A numeric input field with up/down arrows, containing '0'.
- Address to:** A numeric input field with up/down arrows, containing '250'.
- Baudrate:** A dropdown menu with '2400,300' selected.
- Use broadcast address:** A checked checkbox.

Reading
One meter
All meters
Address from
Address to
Baudrate
2400,300
2400
300
Use broadcast address
Advanced
Wakeup
None
Calmex
Sensonic I
Sensonic II
Firmware 2
Read monthly values
Route
Route Name
Show this before reading

Window Route Reading Options

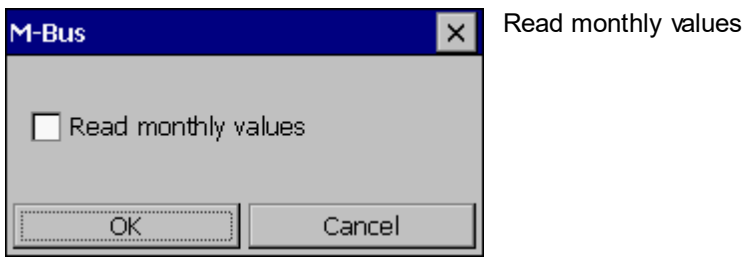

7.7 Sensus((S))cout

Window New Meter

New meter

Type: Scout-P4

Meter ID: 57912831

Repeater:

☐ Rp1

☐ Rp2

☐ Rp3

Module Address: 00278-07-03156850

Input: [Icon]

OK Cancel

Type
Meter ID
Repeater addresses
Module Address
Input

Window Configure Meter

Configure meter

Meter: 02582-07-03146536 Scout-S

General Basic Logger Events

Meter ID: .03146536

Fab. No.: .03146536

Read Write Close

Type
Meter ID
Fab. No.

Basic
Meter type
Pulse Value
Pulse Unit
Meter Index
Date/Time
Remaining Battery Capacity

Logger
Datalogging mode
Deactivated
By Time Steps
Once a Week
Once a Month
Time Step
Multiplier
Start Hour
List Logged values

Events
Tampering
Detection enabled
Detected
Reset
Leakage
Detection enabled
Started
Stopped
Limit

- Detection Period
- Reset
- Brk. Pipe
 - Detection enabled
 - Started
 - Stopped
 - Limit
 - Detection Period
 - Reset
- Back flow
 - Detection enabled
 - Detected
 - Reset
 - Grid Back flow events
- Read
- Write

Window Configure Scout-MB Meter

Configure meter

Meter

01352-08-03147326

Scout-MB

Read meters

Detect Meters

Addr.	Baud	Manufac.	Vers.	Medium
0	2400	SEN	12	Heat (volume mea
1	2400	SEN	80	Warm water

Address

Clear Logger

Close

- Meter
- Get Meter List
- Detect Meters
- Grid Meter List
- Address
- Clear Logger

Window Expert Mode

Expert [X]

Type:

Address:

Parameter:

Property	Value
Inputs	2 (05)
Data logging	ByTimeSteps (0)
Wirecut detection	Disabled (05)
Residual leak detect	Disabled (05)
Extreme leak detecti	Disabled (05)
Read fault detection	Disabled (05)

Type
Address
Parameter
Value
Read
Write

Window RSSI Level

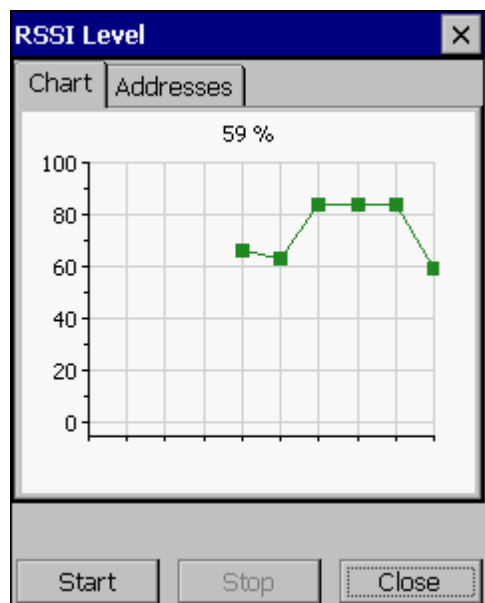


Chart
Addresses
Repeater addresses
Module Address
Communication Status
Start
Stop

Window Connection options

Connection options

COM port

Test

COM5

Wake-up length

1 s

OK

Cancel

COM port
Test
Wake-up length

Window Offroute Reading Options

Sensus((S))cout

Reading

Advanced

Route

☒ One Meter

☐ Meter List

☐ All Meters

Repeater addresses

☒ Rp1 00278-07-03156850

☐ Rp2

☐ Rp3

Module Address

Input

MB

00278-07-03156850


☒ Show this dialog before reading

OK

Cancel


Reading
One Meter
Repeater addresses
Module Address
Input
MB
Meter List
Module Addresses
All Meters
Advanced
Fast reading mode
Read events in fast mode
Read monthly values
Service features
Route
Route Name
Read Point
Show this before reading

Window Route Reading Options

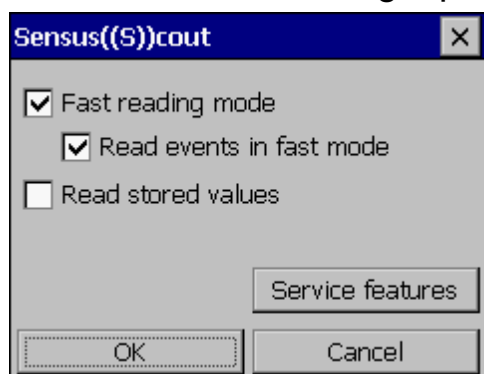

Fast reading mode
Read events in fast mode
Read monthly values
Service features

Window Service Features

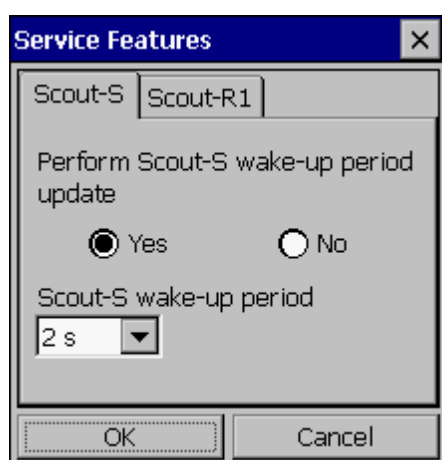

Scout-S
 Perform Scout-S wake-up period update
 Scout-S wake-up period
Scout-R1
 Perform Scout-R1 pulse weight, data logger update

7.8 Flag

Window New Meter

New meter [X]

Type: PolluStat 2WR4

Meter ID: 6281573245

Address: 144

OK Cancel

Type
Meter ID
Address

Window Connection options

Connection options [X]

COM port: COM1

OK Cancel

COM port

Window Offroute Reading Options

Flag [X]

Reading Route

Address: 144

Type: 2WR5 L&G

Use wakeup: ☒


☒ Show this dialog before reading

OK Cancel

Reading
Address
Type
Use wakeup
Route
Route Name
Read Point
Show this before reading


7.9 Sensus

Window Connection options

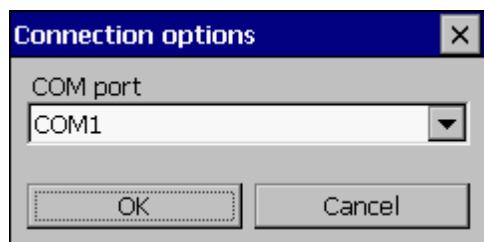

COM port

Window Offroute Reading Options

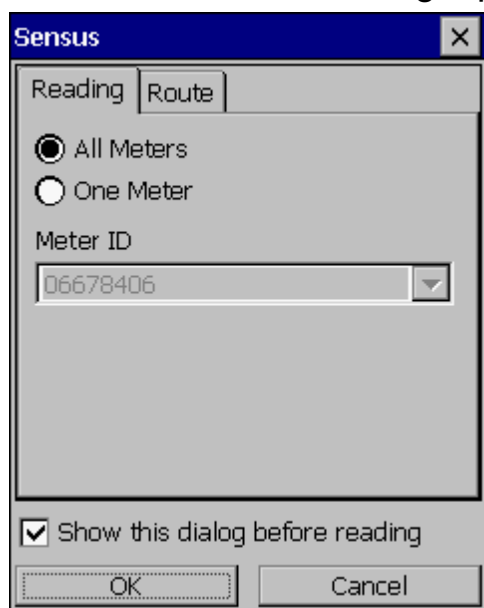

Reading

All Meters

One Meter

Meter ID

Route


Route Name

Read Point

Show this before reading


7.10 Ramar

Window New Meter

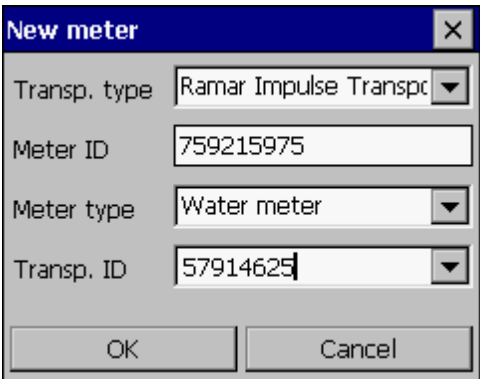


Transp. type
Ramar Impulse Transponder
Ramar Minibus Transponder
Meter ID
Meter type
Transp. ID

Window Configure Meter

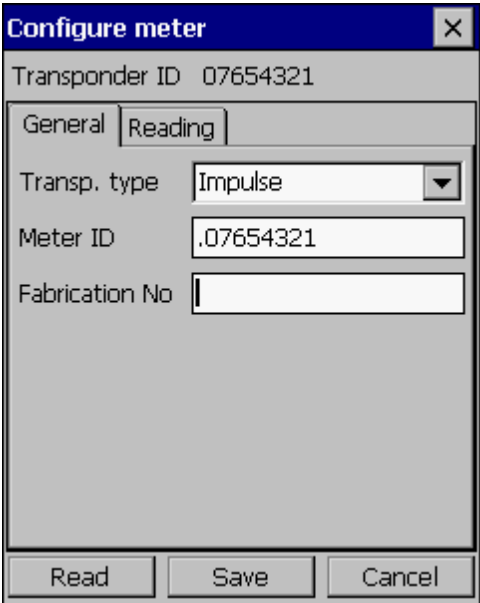

Transponder ID
General
Transp. type
Ramar Impulse Transponder
Ramar Minibus Transponder
Meter ID
Fabrication No
Reading
Meter type
Pulse count
Pulse offset
Multiplier
Meter offset
Value
Read
Write

Window Connection options

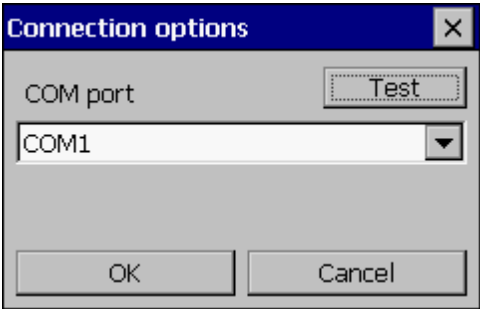

COM port
Test
RAMAR Area code

Window Offroute Reading Options

Ramar

Reading Route

☒ All Meters
☐ One Meter

Transponder type
Ramar Impulse Transponder

Transponder ID





☒ Show this dialog before reading

OK Cancel

Reading
All Meters
One Meter
Transponder type
 Ramar Impulse Transponder
 Ramar Minibus Transponder
Transponder ID
Route
 Route Name
 Read Point
Show this before reading

7.11 Sensus-RF

Window Configure Meter

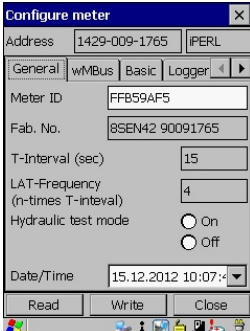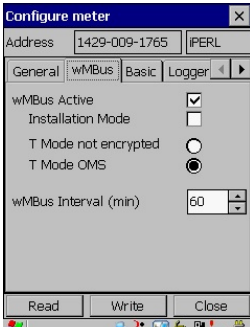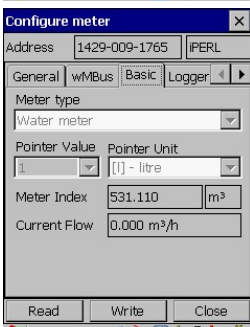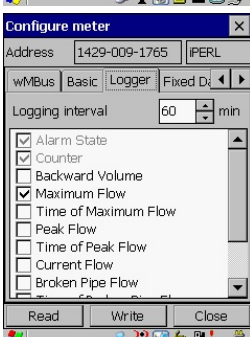	<p>Enables to show or modify meter work mode</p> <p>Address Shows meter radio address and meter type</p> <p>Meter ID Shows and enables to change Meter ID</p> <p>Fab. No. Shows meter fabrication number</p> <p>T-Interval Shows transmission Interval i.e. time between bubble-up transmissions, in seconds</p> <p>LAT-Frequency Shows number of transmission intervals between Listen After Talk windows</p> <p>Hydraulic test mode Enables to switch on/off hydraulic test mode</p> <p>Date/Time Shows and enables to set meter date and time</p> <p>Read Rereads current meter configuration</p> <p>Write Writes configuration changes to the meter</p> <p>Close Closes the window</p>
	<p>wMBus Active Enables to switch on/off wireless M-Bus telegrams transmission</p> <p>Installation Mode Indicates, if module is in installation-mode</p> <p>T Mode not encrypted Enables to set not encrypted mode</p> <p>T Mode OMS Enables to set Open Metering System mode</p> <p>wMBus Interval Enables to set wireless M-Bus telegrams transmission interval in minutes</p>
	<p>Meter type Shows meter type</p> <p>Pointer Value Shows pulse weight for current meter, it is always 1 for iPERL</p> <p>Pointer Unit Shows pulse unit for current meter, it is always litre for iPERL</p> <p>Meter Index Shows current meter value</p> <p>Current Flow Shows current volume flow</p>
	<p>Logging interval Enables to set data logging interval in minutes</p> <p>List Enables to select which counters should be logged</p>


Day in the month Enables to set day in the month. At 00:00 hours of this day will be stored values for fixed day logger.
List Enables to select which counters should be logged

Max. flow Shows time stamp and value of maximum flow
Reset Enables to reset maximum flow watching


Detection enabled Enables to switch on/off magnet tampering detection
Reset Enables to reset last magnet tampering event
Detected Shows if magnet tampering was detected and time stamp of this event start
Stopped Shows time stamp of this event end

Detection enabled Enables to switch on/off leakage detection
Detected Shows if leakage was detected
Started Shows time stamp of leakage event start
Stopped Shows time stamp of leakage event end
Limit Enables to set leakage event limit
Detection Period Enables to set leakage event detection period
Reset Enables to reset last leakage event


Detection enabled Enables to switch on/off broken pipe detection
Detected Shows if broken pipe was detected
Started Shows time stamp of broken pipe event start
Stopped Shows time stamp of broken pipe event end
Limit Enables to set broken pipe event limit
Detection Period Enables to set broken pipe event detection period
Reset Enables to reset last broken pipe event

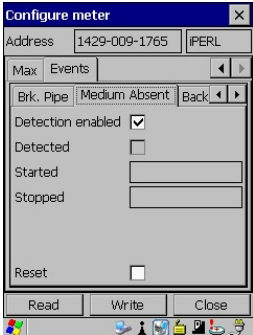

- Detection enabled Enables to switch on/off medium absent event detection
- Detected Shows if medium absent event was detected
- Started Shows time stamp of medium absent event start
- Stopped Shows time stamp of medium absent event end
- Reset Enables to reset last medium absent event

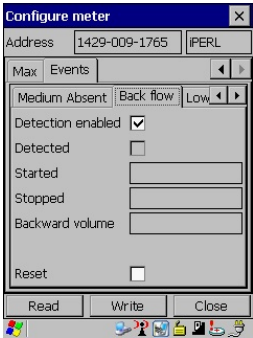


- Detection enabled Enables to switch on/off backward flow event detection
- Detected Shows if backward flow event was detected
- Started Shows time stamp of backward flow event start
- Stopped Shows time stamp of backward flow event end
- Backward volume Shows backward volume value
- Reset Enables to reset last backward volume event

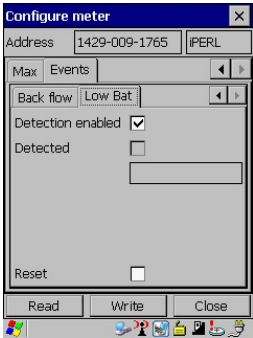


- Detection enabled Enables to switch on/off low battery event detection
- Detected Shows if low battery event was detected and time stamp of this event start
- Reset Enables to reset last low battery event

Window RSSI Level

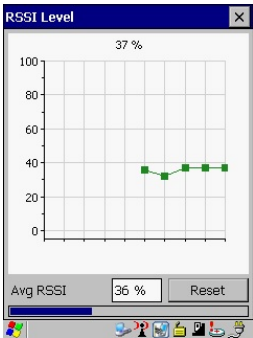


- Shows current RSSI level i.e. radio signal strength between the meter and the SIRT
- Avg RSSI Shows average RSSI level since this window has been open or RSSI level watching has been reset
- Reset Enables to reset a average RSSI level counting

Window Connection options

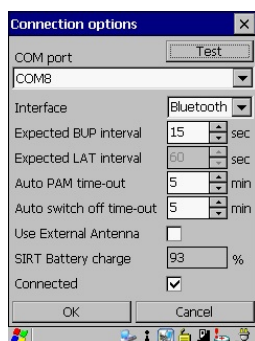


- Enables to set communication channel parameters
- COM port Enables to select serial port on which is the SIRT connected
- Test Enables to test if SIRT is really present on selected serial port
- Interface Enables to select communication interface Bluetooth/USB
- Expected BUP interval Enables to set expected bubble-up transmissions interval. The value is used for calculating of meter reading time-out.
- Expected LAT interval Shows expected Listen After Talk window interval as 4 x BUP interval
- Auto PAM time-out Enables to set time-out after which is reading request automatically removed from reading request stack if it was not answered.
- Auto switch off time-out Enables to set time-out after which is SIRT switched off if no request is in progress.
- Use External Antenna Enables to set external antenna usage
- SIRT Battery charge Shows current SIRT battery charge in percent
- Connected Shows whether is SIRT currently connected

Window Offroute Reading Options

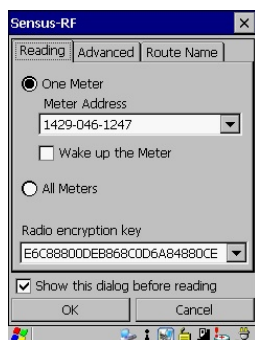


- Enables to set meter offroute readout parameters
- One Meter Only selected meter will be read
- All Meters All meters within earshot will be read
- Meter address Radio address of meter to be read
- Wake up the Meter Sets whether the meter should be awakened before the readout
- Radio encryption key Sets the encryption key used to decode incoming telegrams
- Show this dialog before reading If set, this window is shown before each reading, if not, the reading parameters can be set only on explicit command from menu.

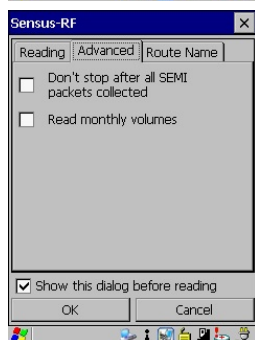

- Don't stop after all SEMI packets collected Sets whether or not the SIRT should be deactivated after all meters within the earshot are read
- Read monthly volumes Sets whether monthly (fixed date reading) values should be read too

Window Route Reading Options

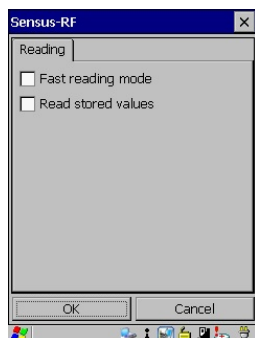

- Enables to set meter route readout parameters
- Fast reading mode If set, only the bubble-up telegram is used as the source for the readout, if not SEMI telegrams are requested.
- Read stored values Sets whether monthly (fixed date reading) values should be read too

7.12 Logon and access levels

Logon

Handheld software requires logon on startup. Please choose the appropriate level of access as listed below.

	LEVEL 1 Reader	LEVEL 2 Technician	LEVEL 3 Installer	LEVEL 4 Expert
Route reading	X	X	X	X
Route planning			X	X
Main Window Tools				X
Main Window File	X	X	X	X
Main Window File Copy Route Planning to Route			X	X
Route Meter	X	X	X	X
Route View		X	X	X
Route Tools				X
Route Planning Meter, View			X	X
Route Planning Tools			X	X
Route Planning Expert Mode				X



The logon on startup can be disabled in the Tools | Logon Options settings or by your PC software manager. In this case you can start logon dialog manually using the File | Logon command from the main SensusREAD window.

7.13 COM Port Numbers

Workabout Psion Pro

In the table below you can find the correct settings of COM Port numbers within SensusREAD on Psion Pro for the following extension cards:

- **Interface card**, offering interfaces: RS-232, TTL, USB, IrDA
- **Scout CF radio card**, enabling the reading of the Scout radio networks

			No card	Interface card	Scout CF card	Both cards
Channel	Interface	Option Page (Protocol)				
RS232 - MBUS (IEC 870)	RS232	MBUS		COM 1		COM 1
TTL - MBUS (IEC 870)	TTL					
USB - MBUS (IEC 870)	USB	MBUS		COM 0		COM 0
RS232 - ZVEI (IEC 1107)	RS232	ZVEI		COM 1		COM 1
TTL - ZVEI (IEC 1107)	TTL					
USB - ZVEI (IEC 1107)	USB	ZVEI		COM 0		COM 0
RAMAR	TTL	RAMAR		COM 1		COM 1
SENSUS((S))cout	CF card	Scout			COM 1	COM 5
Sensus Interface	RS232	Sensus		COM 1		COM 1



Please remember that these settings must be made both in the Route Planning section and the Route section of the Psion Pro software. Changed settings in Route Planning do not apply to Route and vice versa.

Other Handhelds

Support for other handhelds can be added in the future. Please consult your handheld documentation and extension cards documentation for correct COM port settings.

7.14 Suspend Mode

Handheld Suspend Mode

Handheld software prevents the handheld from going to sleep mode while communication takes place, which might influence the handheld's battery lifetime, but enables customer to finish longer reading procedures smoothly. Read more information about settings in your handheld manual.

Route Reading

After starting the reading the handheld is blocked from going to the suspend mode to prevent disconnecting of the communication ports. It means the device is not suspend after expiring predefined time in the handheld Power Properties settings. The settings of the handheld display and backlight are not affected, it means handheld display can be dimmed after predefined timeout (see Display Properties of your handheld). After the route reading communication procedure is finished, the SensusREAD stops above procedure and the handheld uses Power Properties and Display Properties as set in its Control Panel.

Route Planning

SensusREAD does not control the Power and Display Properties of the handheld and the user must prevent the handheld from going to the Suspend Mode manually during the long time operations e.g. Sensus((S))cout read all meters procedure.

7.15 Keyboard Shortcuts

Route reading

Space	= Toggle meter list and detail tab
A	= Skip to next not read meter
C	= Toggle non read meter filter
Ctrl/H	= Show hint window with full content of current cell

Shift/Ctrl/D

= Clear current meter reading

Shift/Ctrl/C

= Clear ALL meters readings

Shift/Ctrl/S

= Switch sound on/off

Any text

= Find typed text in current column

Route Planning

Space

= Toggle meter list and detail tab

A

= Skip to next not read meter

Ctrl/H

= Show hint window with full content of current cell

Shift/Ctrl/S

= Switch sound on/off

Any text

= Find typed text in current column

Sensus((S))cout meter config

Shift/Ctrl/E

= Open expert mode config window

Check RSSI level

Alt/Ctrl/U

= Endless loop on/off

Part



8 Program Info

8.1 Localization

Localization of the Software

The software can be easily localized to any language. If you need to add a new language or improve the translation for the existing language, please contact Sensus. The tool and documents to localize the software are available from the SensusREAD project manager.



The **Sisulizer** software tool is required to localize the SensusREAD software. It can be downloaded from the <http://www.sisulizer.com/> web. Although you can use free edition of the Sisulizer, it is recommended to use at least Translator Edition or higher.

Read this manual completely.

Install the SensusREAD software, make familiar with it and all available features.

Download and install the software tool Sisulizer and **read its manual completely**.

To localize the PC software modify the file "Translate_PC.slp" which is located in the installation folder of the SensusREAD (default location on English OS is C:\Program Files\SensusREAD).

Send the modified file to the Sensus.

To localize the HH/EM software modify the file "Translate_HH.slp" which is located in the installation folder of the SensusREAD (default location on English OS is C:\Program Files\SensusREAD).

Send the modified file to the Sensus, your changes will be included in the next update.

Localization of this manual

This manual can be easily localized to any language. If you need to create an user manual in different language or improve any of the existing translations, please contact Sensus. The tool and the base English document to localize this manual are available from the SensusREAD project manager.



The **Help & Manual** software tool is required to localize the SensusREAD manual. This tool was used to create the English version of this manual and it can be used to translate the manual to other languages. It can be downloaded from the <http://www.helpandmanual.com/> web.

Read this manual completely.

Install the SensusREAD software, make familiar with the software and all available features.

Download and install the software tool Help & Manual and **read its manual completely**.

Please read Translating Your Projects topic from the H&M help. Please notice you need the professional version of the H&M. Please read also Translating in Help & Manual topic from the H&M help, it's important that you create a fixed folder location on your PC where you will keep the original English H&M project. Whenever the original H&M project is updated, re-download it and save it always in the same folder. The localized e.g. German or Danish project will be linked to this original project.

Download the English H&M project. The download file name is **sread_help_en.zip** and it is available from the SensusREAD download page. Extract the project file to your PC.

Open the English H&M project file SensusREAD.hmnp.

Follow the steps described in the topic Translating in Help & Manual, paragraph "Procedure for translating projects in Help & Manual". The first step is "1. Make a copy of your original project for the translator" :

In the Professional version select Synchronize in Project > Tools and make a sibling copy of the original project. This copy will have exactly the same internal IDs as the original, which will make it possible to identify changes and update the translated version with the Synchronize tool later.



Let's assume you extracted the original project to
 ...MyTranslations\SensusREAD
 please create a sibling in a different folder at the same level as proposed by the Synchronize dialog, e.g.
 for German it would be
 ...MyTranslations\SensusREAD_1031\SensusREAD_1031.hmxd
 Please make sure that the original English H&M project will not be modified, it means do not modify any
 files in the first folder and always modify files in the second folder.

Send the modified project to the Sensus (zip completely the sibling project folder), your changes will be included in the next update.

8.2 TXT Import File Structure

Text file - one line per meter.

File encoding Unicode, including BOM (byte order mark) \$FFFE. Delimiter Tab (tabulator), text qualifier " (double quote). Delimiters not allowed in the values. First line MUST contain import column codes as listed below in the **Column Code**. Order of the columns is not mandatory, since the columns are identified by **Column Code**. Not used columns can be omitted.

Column Code	SensusREAD Caption	Value Type	Not null	Unique	Description
ROUTE	Route Name	Varchar (64)	YES	NO	Name of the route
ROUTENO	Route Number	Varchar (16)	NO	NO	Number of the route
SEQ	Meter Sequence	Smallint	NO	NO	Meter sequence in the route
RPOINT	Point	Varchar (64)	NO	NO	Reading Point for wireless routes
RPOINT_SEQ	Point Sequence	Smallint	NO	NO	Reading Point sequence in the route
SITE	Site ID	Varchar (32)	YES	YES	Meter Site unique identification (Billing System)
SITENO	Site No	Varchar (32)	NO	NO	Meter Site identification (Billing System)
STREET	Street	Varchar (32)	NO	NO	Street Address, street name
STREETNO1	StN1	Varchar (5)	NO	NO	Street Address, street number 1
STREETNO2	StN2	Varchar (5)	NO	NO	Street Address, street number 2
CITYAREA	City Area	Varchar (32)	NO	NO	Street Address, city area
CITY	City	Varchar (32)	NO	NO	Street Address, city name
ZIP	ZIP	Varchar (10)	NO	NO	Street Address, ZIP
REGION	Region	Varchar (32)	NO	NO	Street Address, region
COUNTRY	Country	Varchar (32)	NO	NO	Street Address, country
SITERMK	Site Remark	Varchar (255)	NO	NO	Meter Site remark, optional info about the meter site
SITELCT	Meter Location	Varchar (255)	NO	NO	Optional info about the placement of the meter
CSTNO	Customer ID	Varchar (32)	NO	NO	Customer, identification from the billing system
CSTNAME	Customer Name	Varchar (64)	NO	NO	Customer, name
CSTADDRESS	Customer Info	Varchar (64)	NO	NO	Customer, optional info
APARTMENT	Apartment	Varchar (32)	NO	NO	Apartment info
FLOORNO	Floor	Varchar (5)	NO	NO	Floor number
OCCUPANT	Occupant	Varchar (64)	NO	NO	Occupant info, if different from the customer
SBH_SERIALNO	Ex Meter ID	Varchar (32)	NO	NO	Site Billing History, meter serial number
SBH_FABNO	Ex Fab.No.	Varchar (32)	NO	NO	Site Billing History, meter fabrication number
MPNAME	Ex Meter Type	Varchar (32)	NO	NO	Site Billing History, meter type product name
SBH_DT_RDT	Ex Date	Datetime	NO	NO	Site Billing History, previous reading date time stamp
SBH_VALF	Ex Value	Float	NO	NO	Site Billing History, previous reading value
SBH_UNT	Ex Unit	Varchar (16)	NO	NO	Site Billing History, previous reading unit

ADC_VALF	ADC Value	Float	NO	NO	Site Billing History, average daily consumption, value
ADC_UNT	ADC Unit	Varchar (16)	NO	NO	Site Billing History, average daily consumption, unit
ADC_DEVIATION	ADC Rel Dev	Float	NO	NO	SBH, ADC, permissible relative deviation [%]
CNS_VALF1	Ex Consumption 1	Float	NO	NO	SBH, history of the consumption value 1
CNS_VALF2	Ex Consumption 2	Float	NO	NO	SBH, history of the consumption value 2
CNS_VALF3	Ex Consumption 3	Float	NO	NO	SBH, history of the consumption value 3
CNS_VALF4	Ex Consumption 4	Float	NO	NO	SBH, history of the consumption value 4
CNS_VALF5	Ex Consumption 5	Float	NO	NO	SBH, history of the consumption value 5
CNS_UNT	Ex Cns Unit	Varchar (16)	NO	NO	SBH, unit for values 1..5
CNS_INTERVAL	Ex Cns Period	Smallint	NO	NO	SBH, period for values 1..5, see Code Book Periods
AMR_CHANNEL	AMR Channel	Smallint	NO	NO	AMR, channel number, see Code Book Channels
AMR_DEVICE	AMR Device ID	Integer	NO	NO	AMR, device type number, see Code Book Devices
AMR_SERIALNO	AMR Meter ID	Varchar (32)	NO	NO	AMR, module-programmed Meter ID, e.g. Scout-S
AMR_FABNO	AMD Fab.No.	Varchar (32)	NO	NO	AMR, module-programmed Fab.No., e.g. Scout-S
AMR_MBUS_ADDRESS	MBus Address	Integer	NO	NO	AMR, Channel Mbus, Mbus address
AMR_MBUS_BAUD	MBus Baud Rate	Integer	NO	NO	AMR, Channel Mbus, baud rate
AMR_SCOUT_ADDRESS	((S)) Address	Varchar (32)	NO	NO	AMR, Channel Scout, radio address
AMR_SCOUT_INPUT	((S)) Input	Varchar (5)	NO	NO	AMR, Channel Scout, input number, A,B,C or D
AMR_SCOUT_REPEATER1	((S)) R1	Varchar (32)	NO	NO	AMR, Channel Scout, repeater 1 radio address
AMR_SCOUT_REPEATER2	((S)) R2	Varchar (32)	NO	NO	AMR, Channel Scout, repeater 2 radio address
AMR_SCOUT_REPEATER3	((S)) R3	Varchar (32)	NO	NO	AMR, Channel Scout, repeater 3 radio address
AMR_SCOUT_MBDEVICE	((S)) MB Device	Integer	NO	NO	AMR, Channel Scout, Scout-MB, device type number of the connected Mbus device, see Code Book Devices
AMR_SCOUT_MBADD	((S)) MB Address	Integer	NO	NO	AMR, Channel Scout, Mbus address of the meter connected to the Scout-MB module
AMR_SCOUT_UNIT	((S)) Unit	Smallint	NO	NO	AMR, Channel Scout, Scout unit, see Scout docs
AMR_SCOUT_WEIGHT	((S)) Weight	Smallint	NO	NO	AMR, Channel Scout, Scout pulse weight, see Scout
AMR_SCOUT_WAKEUP	((S)) Wake-up	Smallint	NO	NO	AMR, Channel Scout, wake-up period of the module
AMR_SENSUSRF_ADDRES S	S-RF Address	Varchar(32)	NO	NO	AMR, Channel Sensus-RF, radio address
AMR_SENSUSRF_ENCKEY	S-RF Key	Varchar(64)	NO	NO	AMR, Channel Sensus-RF, encryption key

More values can be defined in future

8.3 PC database

The database is a local file system database called **ElevateDB**, the producer is the company Elevate software. More information and the the ODBC driver are available on the producer web page <http://www.elevatesoft.com/>. (Remark: The predecessor of the SensusREAD, software Dokom Mobile used the database DBISAM from the same company)

8.3.1 Code Book Channels

Value	Channel	Remark
0	Manual	Default value
1	MBus (IEC 870)	

2	Sensus((S))cout	
3	Flag (IEC 1107)	
4	Sensus Interface	
5	RAMAR	
6	ltron-RF	DO NOT USE. Reserved for SREAD USYS.
7	Sensus-RF	

More values can be defined in future

8.3.2 Code Book Devices

Value	Device Type	Remark
256	Water Meter	Default value
257	Gas Meter	
258	Electricity Meter	
259	Heat Meter	
000	Unknown	Do not use
001	N/B 101/501	
002	PolluSonic 2	
003	PolluCom 2/M	
004	PolluCom E	
005	PolluTherm	
006	PolluWatt Duo	
007	PolluMUK E/T	
008	PolluStat	
009	PDB/IM (Volume)	
010	PDB/IM (Flow)	
011	PDB/IM (Heat)	
012	PDB/IM (Electricity)	
013	PolluStat E	
014	PolluFlow	
015	HRI	
017	Residia-M	
018	HRI-Mei (2008)	
019	HRI-Mei (2011)	
020	Multical	
021	Multical compact	
022	PolluStat 2WR4	
023	Residia-M V2 (2008)	
024	Residia-M V2.1 (2010)	
025	Encoder ER56	
029	PolluCom M (NV)	
030	PolluCom E/C (NV)	

Value	Device Type	Remark
031	PolluTherm (NV)	
032	PolluStat E (NV) WE	
033	PolluFlow (NV)	
034	MBus 2P Input 1	
035	MBus 2P Input 2	
046	PolluStat E (NV) EE	
047	PolluTherm (NV) EL	
048	PolluStat	
060	Sharky 775	
061	Scylar 548	
090	Finder 7E.23	
091	Finder 7E.46	
092	Finder 7E.56	
101	Cosmos Encoder	
102	Cosmos Hyb/Ele	
107	Accupuls	
154	Sensonic II	
155	Istameter III	
156	WSD4 (L&G)	
161	Sensonic I	
163	2WR5 L&G	
164	2WR6 L&G	
211	Calmex	
300	FM-2D/K	
810	ZPA Electro Meter Single Phase	
811	ZPA Electro Meter Single Phase (+Status)	
812	ZPA Electro Meter Single Phase (+Status +Relays)	
830	ZPA Electro Meter Three Phase	
831	ZPA Electro Meter Three Phase (+Status)	
832	ZPA Electro Meter Three Phase (+Status +2Relays)	
833	ZPA Electro Meter Three Phase (+Status +3Relays)	
898	Ramar Impulse Transponder	
899	Ramar Minibus Transponder	
910	SensusScoutOther	
911	Scout-P2	
912	Scout-P4	
913	Scout-HRI-A3	
914	Scout-HRI-A4	

Value	Device Type	Remark
915	Scout-R1	
916	Scout-MB	
917	Scout-S	
918	Scout-Mei	Not used
919	Scout-Repeater	
920	Scout-Wavecard	
921	Scout-S V2	
960	Sensus-RF iPerl	
961	Sensus-RF PulsRF-HRI-A3	Reserved for future use
962	Sensus-RF eRegister	
963	Sensus-RF PulseRF	
990	Sensus-RF Sensus-RF Repeater	

More values can be defined in future

8.3.3 Code Book Periods

Value	Period	Remark
1	Daily	
30	Monthly	Default value
90	Quarterly	
256	Yearly	

More values can be defined in future

8.3.4 Code Book Units

Medium	Unit	Scale	Shift	SI Unit
Duration	day	1		day
Duration	s	1		s
Duration	min	60		s
Duration	h	3600		s
Energy	J	1		J
Energy	kJ	1000		J
Energy	MJ	1000000		J
Energy	GJ	1000000000		J
Energy	Wh	3600		J
Energy	kWh	3600000		J
Energy	MWh	3600000000		J
Power	W	1		W
Power	kW	1000		W
Power	MW	1000000		W
Power	J/h	2.77777777777778E-5		W
Power	kJ/h	0.0277777777777778		W
Power	MJ/h	27.7777777777778		W

Power	GJ/h	27777.777777778		W
Power	bar	100000		W
Power	Pa	1		W
Volume	m3	1		m3
Volume	gal	0.003785411784		m3
Volume	ft3	0.028316846592		m3
Volume	ml	1,00E-06		m3
Volume	l	0.001		m3
Volume	in3	1.6387064E-5		m3
Volume	yd3	0.764554857984		m3
Volume flow	m3/s	1		m3/s
Volume flow	ml/s	1,00E-06		m3/s
Volume flow	ml/min	1.66666666666667E-8		m3/s
Volume flow	ml/h	2.7777777777778E-10		m3/s
Volume flow	l/s	0.001		m3/s
Volume flow	l/min	1.66666666666667E-5		m3/s
Volume flow	l/h	2.7777777777778E-7		m3/s
Volume flow	m3/min	0.016666666666667		m3/s
Volume flow	m3/h	0.0002777777777778		m3/s
Volume flow	gal/h	1.05150327E-6		m3/s
Volume flow	gal/min	6.30901964E-5		m3/s
Volume flow	kg/s	0.0002777777777778		m3/s
Temperature	K	1		K
Temperature	C	1	273.15	K
Temperature	F	0.55555555555556	255.372222222222	K
Mass	kg	1		kg
Mass	t	1000		kg
Mass Flow	kg/s	1		kg/s
Mass Flow	kg/h	1		kg/s
Pressure	Pa	1		Pa
Voltage	V	1		V
Current	A	1		A

8.3.5 Code Book Counters

Code	Counter	Medium	Unit
0	Unknown		
7	Energy (heat)	Energy	MWh
8	Energy (elec.)	Energy	kWh
9	Power (heat)	Power	kW
10	Power (elec.)	Power	kW
11	Volume (water)	Volume	m3
12	Volume Flow	Volume flow	m3/h
13	Temperature	Temperature	C
14	Temp. Diff.	Temperature	K
21	Volume (gas)	Volume	m3
22	Backward Volume	Volume	m3
23	Volume Flow Min	Volume flow	m3/h

24	Volume Flow Max	Volume flow	m3/h
25	Power Min (heat)	Power	kW
26	Power Max (heat)	Power	kW
27	Flow Temperature	Temperature	C
28	Return Temperature	Temperature	C
29	Meter ID		
30	Fab. No.		
31	Device Type		
32	Unit		
33	Flow Temperature Min	Temperature	C
34	Flow Temperature Max	Temperature	C
35	Return Temperature Min	Temperature	C
36	Return Temperature Max	Temperature	C
37	Energy (heat) Tariff 1	Energy	MWh
40	Volume (water) Tariff 1	Volume	m3
43	Energy (cooling)	Energy	MWh
38	Energy (heat) Tariff 2	Energy	MWh
39	Energy (heat) Tariff 3	Energy	MWh
41	Volume (water) Tariff 2	Volume	m3
42	Volume (water) Tariff 3	Volume	m3
44	Energy (elec.) Tariff 1	Energy	kWh
45	Energy (elec.) Tariff 2	Energy	kWh
46	Energy (elec.) Tariff 3	Energy	kWh

8.4 NET Files

There are two types of the SensusREAD Network Files (Net Files):

SensusREAD Net Files (*.snet) created on the PC

The first type - SensusREAD Net Files created on the PC software contain route(s) to be sent to the handheld and to be read by the meter reader. The files can be created using the SensusREAD PC software. The files have a default extension "snet".

SensusREAD Net Files (*.snet) created on the Handheld / Emulator


The second type - SensusREAD Net Files created on the handheld software (or Emulator software) contain meter readings to be processed by the PC software. The files have a default extension "snet".



All types of the Net Files are a standard zip files. You can rename them - change their extension to "zip" - and open it using your favorite ZIP file software. After opening the file you will get a directories and files containing SensusREAD HH database. Its structure is described in the chapter HH Database.

8.5 HH Database

SensusREAD Handheld (or Emulator) database is a set of directories and text files and binary files.

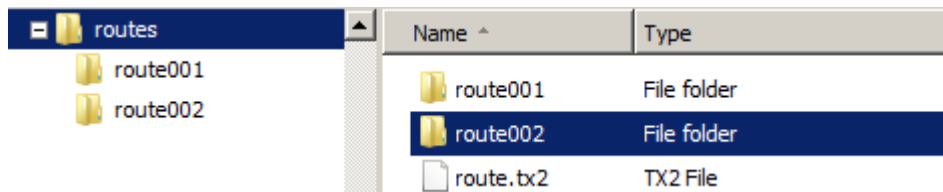

Their structure is described in the following topics.

8.5.1 Directory structure

SensusREAD HH Data directory structure

- offroutes
 - channel.tx2
 - Directory for route planing data
 - Channel statistics
 - channel000
 - reading.tx2
 - Directory for manual channel readings
 - Reading data for all meters
 - plan.tx2
 - Additional route planing information
 - rdtyyyyMMddHHmmssffff.bin
 - Reading details for each meter read
 - evnyyyyyMMddHHmmssffff.bin
 - Meter events
 - logyyyyyMMddHHmmssffff.txt
 - Meter reading communication log
 - channel001
 - Directory for M-Bus channel readings
 - channel002
 - Directory for Scout channel readings
- routes
 - route.tx2
 - Directory for route reading data
 - Route statistics
 - route001
 - site.tx1
 - Directory for 1st route readings
 - Meter sites information
 - reading.tx2
 - Reading data for all meter sites
 - rdtyyyyMMddHHmmssffff.bin
 - Reading details for each meter site read
 - evnyyyyyMMddHHmmssffff.bin
 - Meter events
 - logyyyyyMMddHHmmssffff.txt
 - Meter reading communication log
 - route002
 - Directory for 2nd route readings
 - route003
 - Directory for 3th route readings

File channel.tx2

- Contains read route planning statistics for all channels

No	Field name	Field type	Length	Description
1	ID	integer	5	Channel ID
2	Total	integer	5	Count of meters read

File route.tx2

- Contains route statistics

No	Field name	Field type	Length	Description
1	ID	integer	5	Route ID
2	Name	string	64	Route name
3	Sites done	integer	5	Count of meter sites read
2	Sites total	integer	5	Count of meter sites in the route

File(s) site.tx1

- Contains list of the meter sites to be read on the route

No	Field name	Field type	Description
1	ID	integer	Record ID
2	Manufacturer	string	Manufacturer abbreviation
3	Counter	integer	Main counter ID
4	MeterID	string	Meter ID
5	FabNO	string	Fabrication number
6	Chanel	integer	Channel ID
7	ConfigString	string	Meter configuration string
8	TimeStamp	string	Previous readout time stamp
9	Value	double	Previous readout value
10	Unit	string	Previous readout value unit
11	SiteID	string	Meter site ID
12	CustomerName	string	Customer name
13	CustomerNO	string	Customer number
14	Street	string	Meter site street
15	StreetNO1	string	Meter site street number 1
16	StreetNO2	string	Meter site street number 2
17	Location	string	Meter site location comment
18	SiteRemark	string	Meter site remark
19	ADC	double	Average daily consumption
20	ADCDeviation	double	Average daily consumption deviation
21	Seq	int	Meter site route sequence
22	GPS	string	Meter site GPS coordinates
23	ReadingPoint	string	Reading point name
24	RPointSeq	integer	Sequence within the reading point
25	RPointGPS	string	Reading point GPS coordinates
26	SiteNO	string	Meter site number

File(s) reading.tx2

- Contains base reading results for all meters (for route planning) or all sites (for routes)
- It has same format for route planing and route reading

No	Field name	Field type	Length	Description
1	ID	integer	10	plan.tx1 or site.tx1 record ID
2	Status	integer	1	Readout status 0 - Not defined 1 - Not read, no value, no comment 2 - No value, comment exists 3 - Value exists, events of type Alarm, Error or Warning exist 4 - Value exists, may be event of type Info
3	Manufacturer	string	3	Manufacturer abbreviation
4	Counter	integer	3	Main counter ID
5	MeterID	string	20	Meter ID
6	FabNO	string	20	Fabrication number
7	Manual	integer	1	Flag whether read manually
8	ConfigString	string	200	Meter configuration string
9	TimeStamp	string	19	Reading time stamp
10	Value	double	15	Reading value
11	Unit	string	7	Value unit
12	ReaderID	integer	10	Reader ID
13	Template	string	18	Template for detail files (reading, events, log) name
14	Event	integer	1	Flag whether event detail file exist
15	Readout	integer	1	Flag whether reading detail file exist
16	Log	integer	1	Flag whether communication log file exist

File(s) plan.tx2

- Contains route planing information

No	Field name	Field type	Length	Description
1	ID	integer	10	Record ID
2	Ready	integer	1	Flag whether meter is ready for route
3	SiteID	string	32	Proposed meter site ID
4	Route	string	64	Proposed route name
5	Seq	integer	5	Proposed route sequence
6	GPS	string	32	Meter site GPS coordinates
7	ReadingPoint	string	32	Reading point name
8	RPointSeq	integer	5	Sequence within the reading point
9	RPointGPS	string	32	Reading point GPS coordinates

File(s) rdtyyyyMMddHHmmssffff.bin

- Contains meter reading details
- File structure is described in previous chapter
- Particular elements are specific for each channel

Manual:

Value	Type
Meter ID	string
Fabrication NO	string
Meter type	integer
Value	double
Unit	string

M-Bus:

Value	Type
Meter address	integer
M-Bus raw data	array of bytes

Scout:

Value	Type
Meter address	string
Meter input	string
Meter type	integer
Meter ID	string
Fabrication NO	string
RSSI Level	integer
Index	integer
Value	double
Backward index	integer
Backward value	double
Pulse weight	double
Pulse unit	string
Value unit	string
If logger was read	
Logger last time stamp	date and time
Logger period in minutes	integer
Logger indexes	array of integers
Logger values	array of doubles
If Scout-MB was read	
Meter M-Bus address	integer
M-Bus raw data	array of bytes

Flag:

Value	Type
Flag identification message	array of bytes
Flag reading raw data	array of bytes

Sensus:

Value	Type
-------	------

Sensus reading raw data	array of bytes
-------------------------	----------------

Ramar:

Value	Type
Ramar reading raw data	string

Sensus-RF:

Value	Type
Meter address	integer
Reading raw data (SEMI or BUP)	array of bytes
If logger was read	
Logger raw data	array of bytes

File(s) evnyyyyMMddHHmmssffff.bin

- Contains meter events information
- File structure is described in previous chapter
- Events are stored as list of following structures

Value	Type
Event kind 0 - Info 1 - Warning 2 - Alarm 3 - Error	integer
Event type	integer
Event occurrence	date and time
Event disappearance	date and time
Event description	string

Event type values:

- 0 - Reading comment
- 1 - Scout tampering / Sensus-RF magnetic tamper
- 2 - Scout extreme leak
- 3 - Scout residual leak
- 4 - M-Bus low power
- 5 - M-Bus permanent error
- 6 - M-Bus temporary error
- 7 - M-Bus frame parse failed
- 8 - Scout back flow
- 9 - Scout low battery
- 10 - Reading data not correct
- 11 - Scout-MB module has no meter connected
- 12 - Meter to RF-module communication failed
- 13 - Invalid pulse weight
- 14 - Itron-RF Module dismounted
- 15 - Itron-RF Module detected failure
- 16 - Sensus-RF no SEMI received, reading is based on BUP only
- 17 - Sensus-RF telegram decrypt failed, invalid key probably
- 18 - Sensus-RF module specific error
- 19 - Sensus-RF medium absent
- 20 - Sensus-RF encryption key is not specified, telegram was not decrypted

File(s) logyyyyMMddHHmmssffff.txt

- Contains meter communication log

8.5.2 Data Files Format**Files for read only access**

- Extension *.tx1
- Unicode (UCS2) coded
- Starts with the 2 bytes of BOM, [0xFF][0xFE] means Unicode
- Lines end with \r\n (CR , LF)
- Items in the line separated with \t (TAB), variable length

Files for read/write access

- Extension *.tx2
- Unicode (UCS2) coded
- Starts with the 2 bytes of BOM, [0xFF][0xFE] means Unicode
- Lines end with \r\n (CR , LF)
- Items in the line have constant length

Logs

- Extension *.txt
- Starts with the 2 bytes of BOM, [0xFF][0xFE] means Unicode

Binary files

- Extension *.bin
- File is formed as sequence of binary elements
- Binary element has following structure:

Element ID	Element type	Element value
------------	--------------	---------------

- Element type is 1 byte value with following format

Value type specification MSB			Value type specification LSB	Simple value / array flag	Value length specification MSB		Value length specification LSB
---------------------------------	--	--	---------------------------------	---------------------------	-----------------------------------	--	-----------------------------------

- Value type specification:

- 0 - Null value
- 0 - Boolean value (used for array of boolean values)
- 1 - False
- 1 - Signed short value
- 2 - True
- 2 - Signed integer value
- 3 - Start of structure (sequence of simple values)
- 3 - Signed long value
- 4 - End of structure (sequence of simple values)
- 4 - Byte value
- 5 - Unsigned short value
- 6 - Unsigned integer value
- 7 - Unsigned long value
- 8 - Character (UCS2 encoded)
- 9 - Real value (IEEE Standard is used)
- 10 - Date and time value (stored in Delphi format, integral part is the number of days passed since 12/30/1899, fractional part is fraction of a 24 hour day that has elapsed)

- Simple value / array flag

- 0 - Simple value (one value follows)
- 1 - Array of values (follows size of array in bytes and list of simple values)

- Value length specification

- 0 - No value follows (used for Null, True, False)
- 1 - 1 byte value follows
- 2 - 2 bytes value follows
- 3 - 4 bytes value follows
- 4 - 8 bytes value follows
- 5 - Length of value is in following byte
- 6 - Length of value is in following 2 bytes
- 6 - Length of value is in following 4 bytes

- Samples of Element type values

- 0x00 - Null (Null value, Simple value, 0 bytes length)
- 0x10 - False (False, Simple value, 0 bytes length)
- 0x20 - True (True, Simple value, 0 bytes length)
- 0x30 - Start of structure (Start of structure, Simple value, 0 bytes length)
- 0x40 - End of structure (End of structure, Simple value, 0 bytes length)
- 0x0D - Array of boolean values (Boolean value, Array, 255 bytes max)
- 0x41 - Byte value (Byte value, simple value, 1 byte length)
- 0x4D - Array of byte values (Byte value, Array, 255 bytes max)
- 0x4E - Array of byte values (Byte value, Array, 65535 bytes max)
- 0x12 - Signed short value (Signed short value, Simple value, 2 bytes length)
- 0x23 - Signed integer value (Signed integer value, Simple value, 4 bytes length)
- 0x63 - Unsigned integer value (Unsigned integer value, Simple value, 4 bytes length)
- 0x6D - Array of unsigned integer values (Unsigned integer value, Array, 252 bytes max ~ 63 values max)
- 0x74 - Unsigned long value (Unsigned long value, Simple value, 8 bytes length)
- 0x7D - Array of unsigned long values (Unsigned long value, Array, 248 bytes max ~ 31 values max)
- 0x94 - Real value (Real long value, Simple value, 8 bytes length)
- 0x9D - Array of real values (Real value, Array, 248 bytes max ~ 31 values max)

0xA4	- Date and time value (Date and time value, Simple value, 8 bytes length)
0x82	- One character (Character, Simple value, 2 bytes length)
0x8B	- String of 2 characters (Character, Array, 4 bytes length)
0x8C	- String of 4 characters (Character, Array, 8 bytes length)
0x8D	- String of characters (Character, Array, 254 bytes max ~ 127 characters max)
0x8E	- String of characters (Character, Array, 65534 bytes max ~ 32767 characters max)

- Element ID is 2 bytes identifier:

0x0007	- Energy
0x0008	- Energy electricity
0x0009	- Power
0x000A	- Power electricity
0x000B	- Volume
0x000C	- Volume flow
0x000D	- Temperature
0x000E	- Temperature difference
0x000F	- Mass
0x0010	- Mass flow
0x0011	- Pressure
0x0013	- Voltage
0x0014	- Current
0x0015	- Volume gas
0x0016	- Backward volume
0x0017	- Volume flow min
0x0018	- Volume flow max
0x0019	- Power min
0x001A	- Power max
0x001B	- Flow temperature
0x001C	- Return temperature
0x001D	- Meter ID
0x001E	- Fabrication No
0x001F	- Meter type
0x0020	- Value unit
0x0021	- Flow temperature min
0x0022	- Flow temperature max
0x0023	- Return temperature min
0x0024	- Return temperature max
0x0025	- Energy head tariff 1
0x0026	- Energy head tariff 2
0x0027	- Energy head tariff 3
0x0028	- Volume water tariff 1
0x0029	- Volume water tariff 2
0x002A	- Volume water tariff 3
0x002B	- Energy cooling
0x002C	- Energy electricity tariff 1
0x002D	- Energy electricity tariff 2
0x002E	- Energy electricity tariff 3
0x0100	- M-Bus meter address
0x0101	- M-Bus meter reading row data
0x0200	- Scout meter address
0x0201	- Scout meter input specification
0x0202	- Scout meter RSSI level
0x0203	- Scout meter index (count of pulses)
0x0204	- Scout meter backward index
0x0205	- Scout meter pulse weight
0x0206	- Scout meter backward value
0x0207	- Scout meter pulse unit
0x0208	- Array of scout meter logger indexes
0x0209	- Array of scout meter logger values

0x020A	- Scout meter last logger timestamp
0x020B	- Scout meter logger interval
0x0300	- Flag meter identification message
0x0301	- Flag meter reading raw data
0x0500	- Ramar meter reading raw data
0x0600	- Sensus meter raw data
0x0700	- Itron RF meter MIU version
0x0701	- Itron RF meter MIU type
0x0702	- Itron RF meter Serial No
0x0703	- Itron RF meter polling group
0x0704	- Itron RF handheld date and time
0x0705	- Itron RF handheld day of the week
0x0706	- Itron RF meter daily wake-up start
0x0707	- Itron RF meter date and time
0x0708	- Itron RF meter day of the week
0x0709	- Itron RF meter daily wake-up end
0x0712	- Itron RF meter index (pulse count)
0x0713	- Itron RF meter pulse weight
0x0718	- Itron RF meter fluid meter type
0x0719	- Itron RF meter reading command count
0x0720	- Itron RF meter configuration command count
0x0721	- Itron RF meter wake-up
0x0722	- Itron RF meter battery counter
0x0723	- Itron RF meter FDR index
0x0736	- Itron RF meter leakage threshold
0x0737	- Itron RF meter leakage
0x0751	- Itron RF meter back-flow
0x0752	- Itron RF meter back-flow flags
0x0800	- Sensus-RF meter address
0x0801	- Sensus-RF meter raw data (BUP or SEMI)
0x0802	- Sensus-RF meter logger raw data

Index

- A -

Address 28, 30, 41

- C -

Configuration 46
Configure meter 46
Contact Info 6
Copy plan to route 48

- E -

Export 50

- F -

Fabrication Number 46
File Button 22
Flag 31

- H -

Help & Manual 100
Home 54

- I -

Import 49
Installation 8
Installation - HH 16
Installation - PC 16
Introduction 6

- L -

Language 52
License 9
Localization 52, 100

- M -

Maximum Meter Count 9
MBus 30
MBus address 30

Meter ID 46

- N -

Net Files 56

- O -

Options 22

- P -

Physical Units 51

- R -

RAMAR 31
Registration 9
Requirements 8
Ribbon 23
Route Planning 47
Route Reading 49

- S -

Scout 26, 33
Scout address 28, 41
Scout radio address 28, 41
Sensus Protocol 32
Sensus((S))cout 26, 33
Sisulizer 100

- T -

Translation 52, 100
Trial 9

- U -

Unit 51

- W -

Windows - supported platforms 8